

teknion hiSpace
user instructions




teknion

hiSpace

hiSpace™ height-adjustable tables support dynamic, multi-functional spaces that easily transition as new needs arise, enabling users to adjust tables to fit the task at hand. Height adjustment permits seated or standing work and allows for a healthy variety of postures throughout the day.

hiSpace is highlighted by a signature square leg profile, C-Leg design and electric height-adjustment range. A digital display switch with three memory settings is standard. hiSpace is also available in freestanding and stage-integrated versions for use with Teknion's upStage™ furniture system.



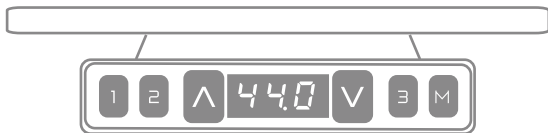

initialization procedure

Press and hold the up ▲ and down ▼ buttons together for least 10 seconds – the table will begin to move down at half speed.

Continue to hold both ▲ and ▼ buttons together – table will move to the lowest position and either rebound slightly or click. Initialization is complete.

move up and down

To move the table up, press and hold the ▲ button.

To move the table down, press and hold the ▼ button.

set to a memory position

Move the table to the desired table height to be saved. Press and release the M button. Then press the desired memory position button (1, 2 or 3) within 10 seconds.

move to a memory position

Press and hold the saved memory position button (1, 2 or 3) – the table will automatically go up or down to the saved position and stop once it reaches the preset height.

change the display units

To switch the display between inches or centimeters, press and hold the M button while simultaneously pressing and holding the ▼ button for 10 seconds.

verification of display and table height

Adjust the table to the lowest position and measure the height. Press and hold the M button while simultaneously pressing and holding the ▲ button for 10 seconds.

The first # will flash. Using the ▲ or ▼ button, set the first digit. Press M again and the second # will flash. Repeat to set the second and third digits.

locking a lowest position

Adjust the table to the lowest desired height. Press and hold the M button while simultaneously pressing and holding the 1 button for 10 seconds. The letter L will display, confirming the position has been locked and the table will not adjust lower than this height.

unlocking a lowest position

Adjust the table to the lowest desired height. Press and hold the M button while simultaneously pressing and holding the 2 button for 10 seconds. This will unlock the set lowest height position.

troubleshooting

q – The table will not adjust
a – Check that the power is connected properly at the control box and at the outlet. Re-initialize the table. If there is still no response, please contact your supplier.

q – The table moves slowly
a – Check that the power is connected properly at the control box and at the outlet. Re-initialize the table. If there is still no response, please contact your supplier.

q – The table moves in the wrong direction
a – Re-initialize the table. If there is still no response, please contact your supplier.

q – The table moves up on its own
a – Press the up button to stop the table from moving. Re-initialize the table. If there is still no response, please contact your supplier.

q – The table moves down on its own
a – Check if the weight on the table exceeds 200lbs (90kg). If so, remove items to reduce weight maximum to 200lbs (90kg). Re-initialize the table. If there is still no response, please contact your supplier.

teknion

www.teknion.com

IN CANADA

1150 Flint Road
Toronto, Ontario
M3J 2J5 Canada
Tel 866.teknion
866.835.6466

IN THE USA

350 Fellowship Road
Mt Laurel, New Jersey
08054 USA
Tel 877.teknion
877.835.6466

OTHER OFFICES LOCATED IN
Europe, South and Central America,
Middle East, Asia and Russia
For regional contact information
go to www.teknion.com

CAN/US/INT July 2018
©Teknion 2018

*,™ trade marks of Teknion Corporation
and/or its subsidiaries or licensed to it.
Patents may be pending.

Printed in Canada.

