

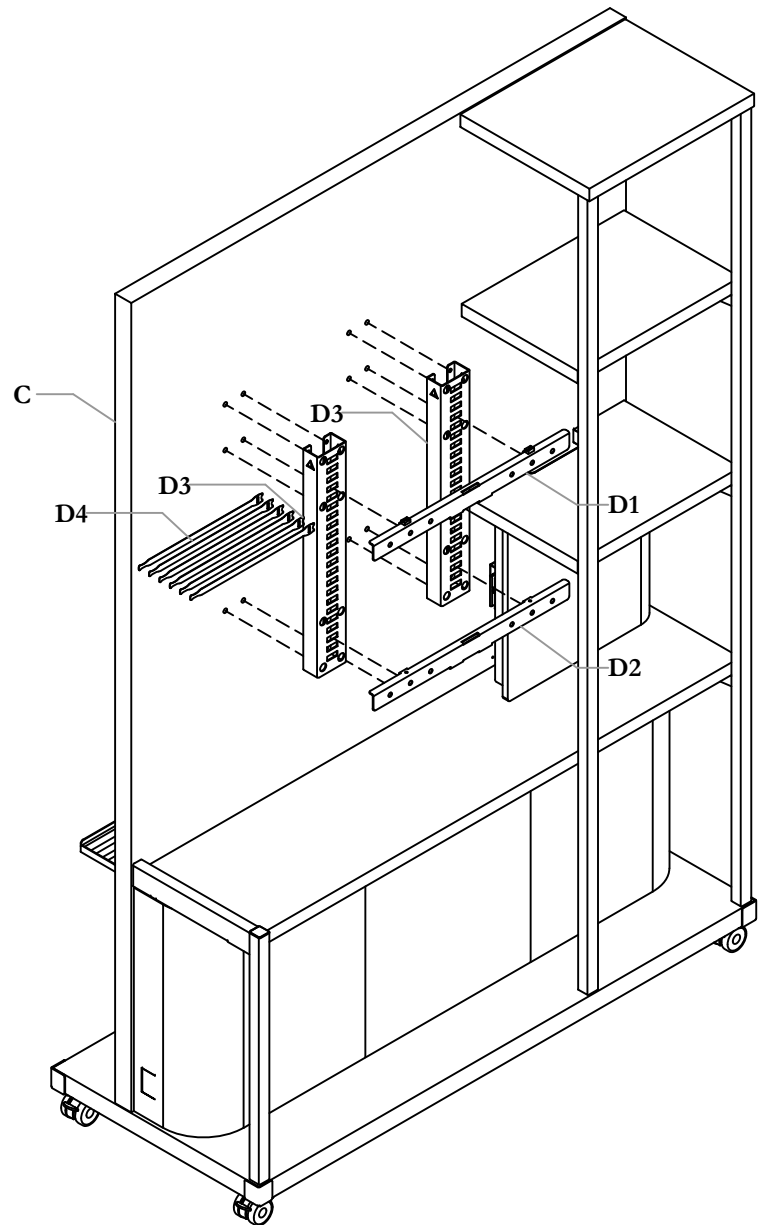


Media Kiosk (HDWT), Media Chat Kiosk (HDWV)

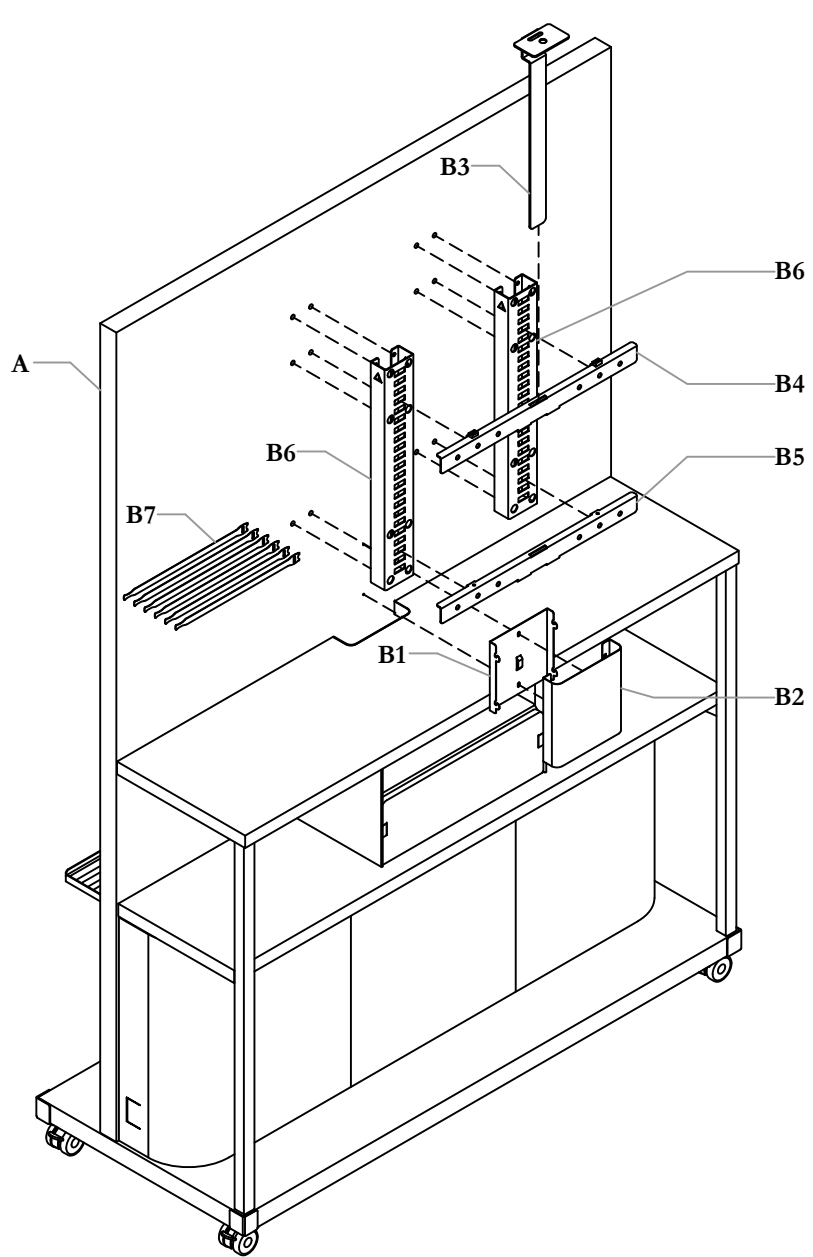

 
Part and Product Identification

HDWT

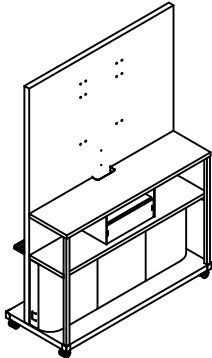


A - Media Kiosk (HDWT) x1


TV MTG KIT- COLLABORATION WALL (X01-4190) x1




B1 - Duct Plate (A16-10672) x1

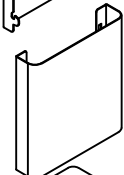

B2 - Duct Cover (A16-10671) x1

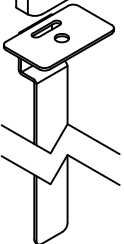


B3 - Camera Mount Bracket (A16-10678) x1

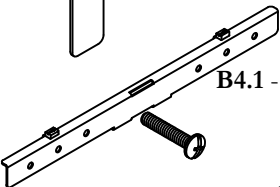


B4 - Top Bracket Subassembly - Tech Easel (N01-5488) x1


B4.1 - MS_10-24_1.0_ST_ZN_PN_SP (E01-0133) x1

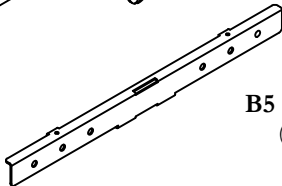


B5 - Monitor Mounting Bracket (A16-9659) x1

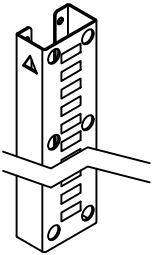

 
B6 - Tech Easel Monitor Bracket (A16-9656) x2




B7 - Velcro 1-Wrap Straps, 12" L (E05-0160) x6

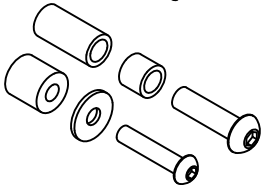

B8 - ClubTalk TV Mount Screw and Spacer Kit (X01-2257) x1

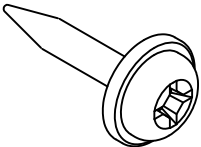


B9 - WS_#8x0.625_ST_ZN_WH_QD (E04-0049) x2




B10 - MS_1/4-20x0.5_ST_ZN_PN_QD (E01-0141) x12

or HDWV

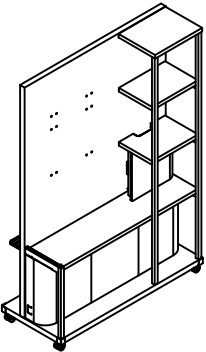


C - Media Chat Kiosk (HDWV) x1

TV MTG KIT- COLLABORATION WALL (X01-4350) x1

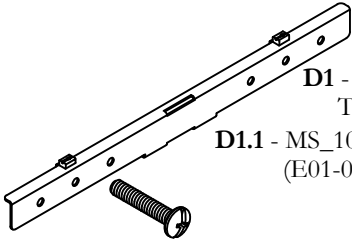


D1 - Top Bracket Subassembly - Tech Easel (N01-5488) x1


D1.1 - MS_10-24_1.0_ST_ZN_PN_SP (E01-0133) x1

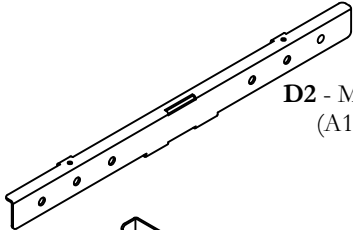


D2 - Monitor Mounting Bracket (A16-9659) x1

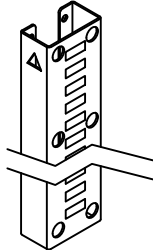

 
D3 - Tech Easel Monitor Bracket (A16-9656) x2



D4 - Velcro 1-Wrap Straps, 12" L (E05-0160) x6

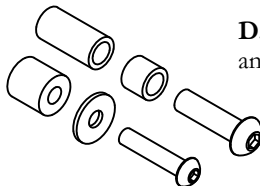


D5 - ClubTalk TV Mount Screw and Spacer Kit (X01-2257) x1



D6 - MS_1/4-20x0.5_ST_ZN_PN_QD (E01-0141) x12

ATTACH TV MOUNT TO TV

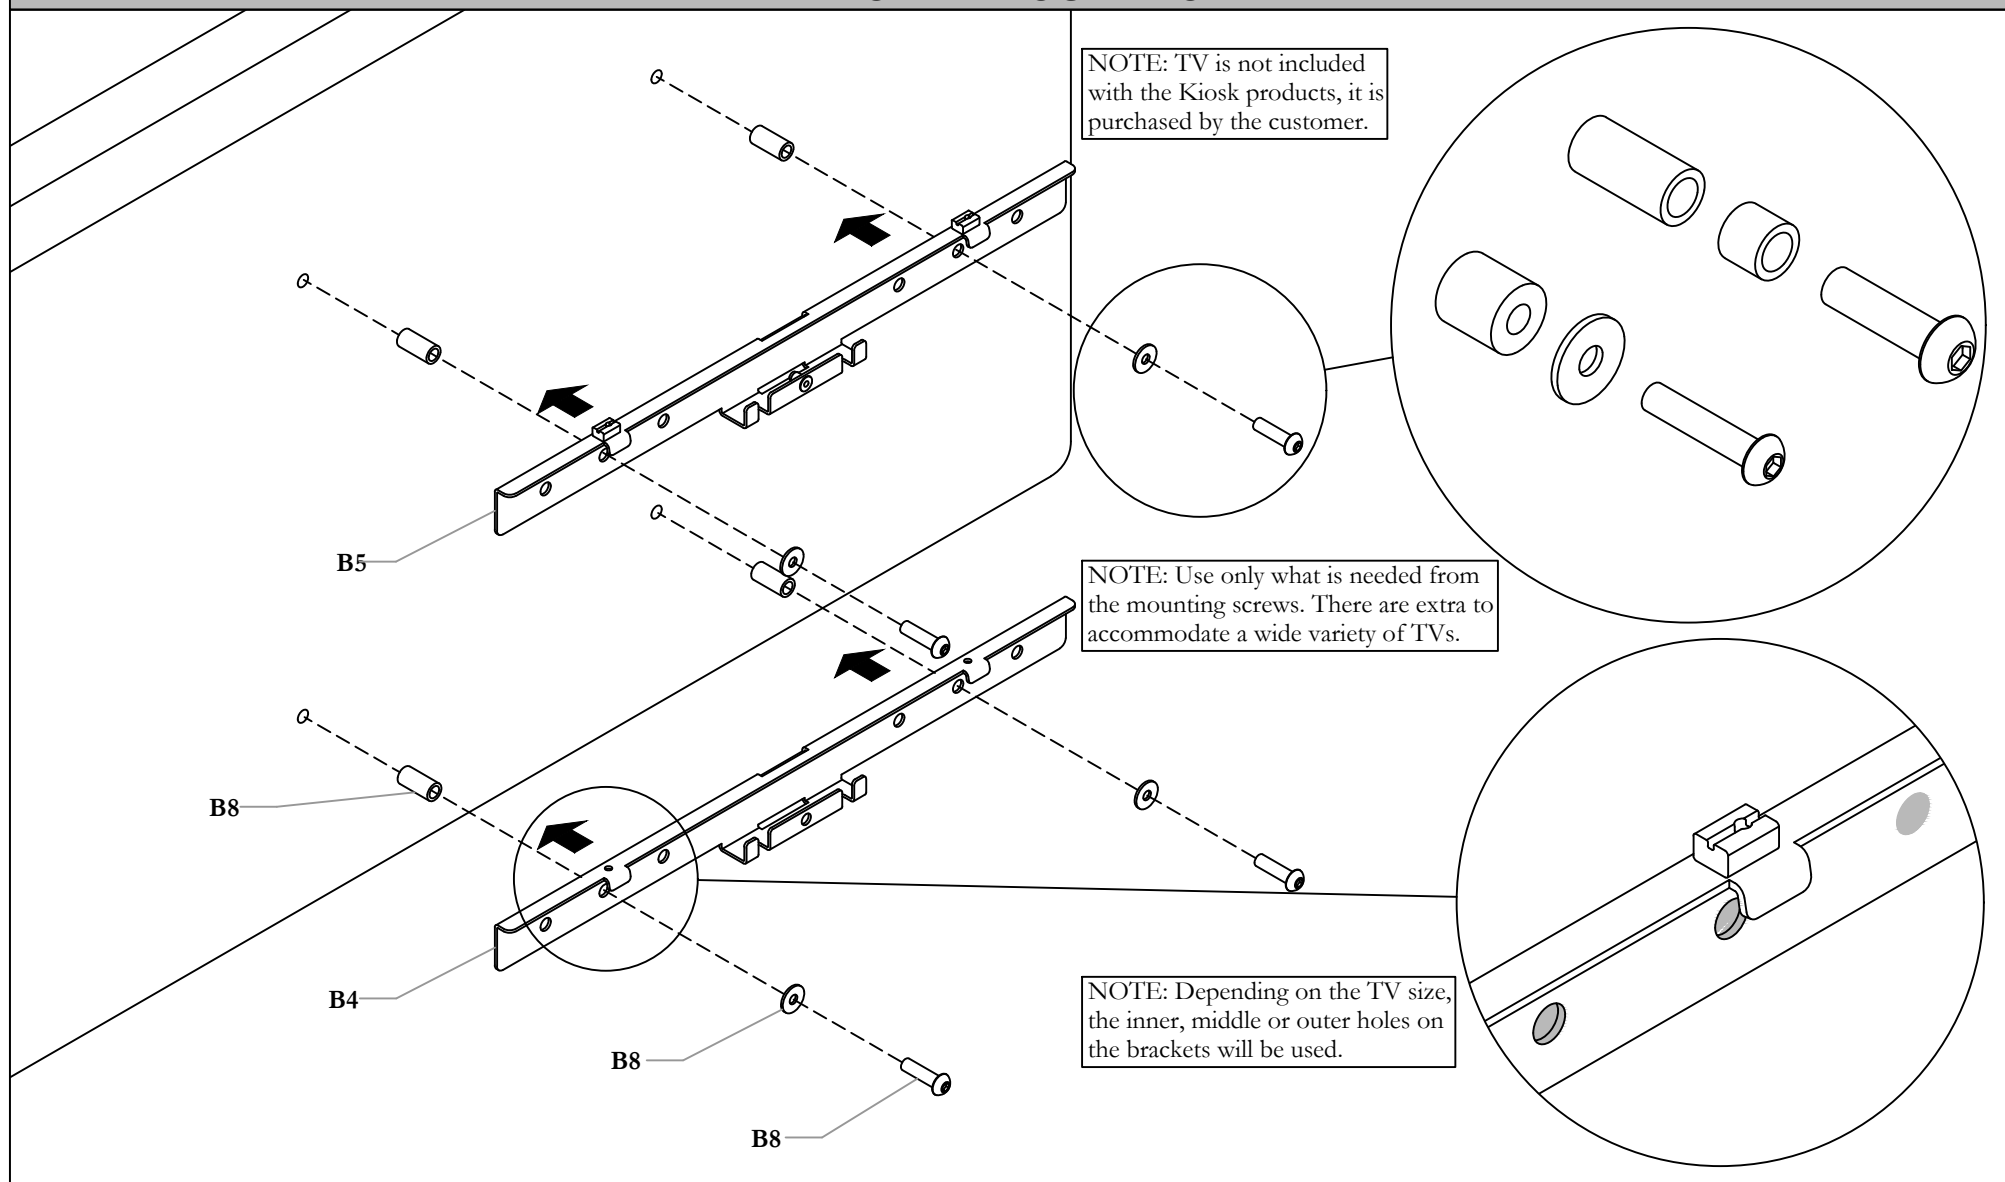


STEP 1: Attach the Top Bracket and Monitor Mounting Bracket to the TV of choice. The mounting kit hardware comes with screws, spacers and washers of various sizes to suit the TV of choice. Use the screws needed from the TV mounting set.

NOTE: TV is not included with the Kiosk products, it is purchased by the customer.

NOTE: Use only what is needed from the mounting screws. There are extra to accommodate a wide variety of TVs.

NOTE: Depending on the TV size, the inner, middle or outer holes on the brackets will be used.


INSTALL WEBCAM MOUNT (OPTIONAL)

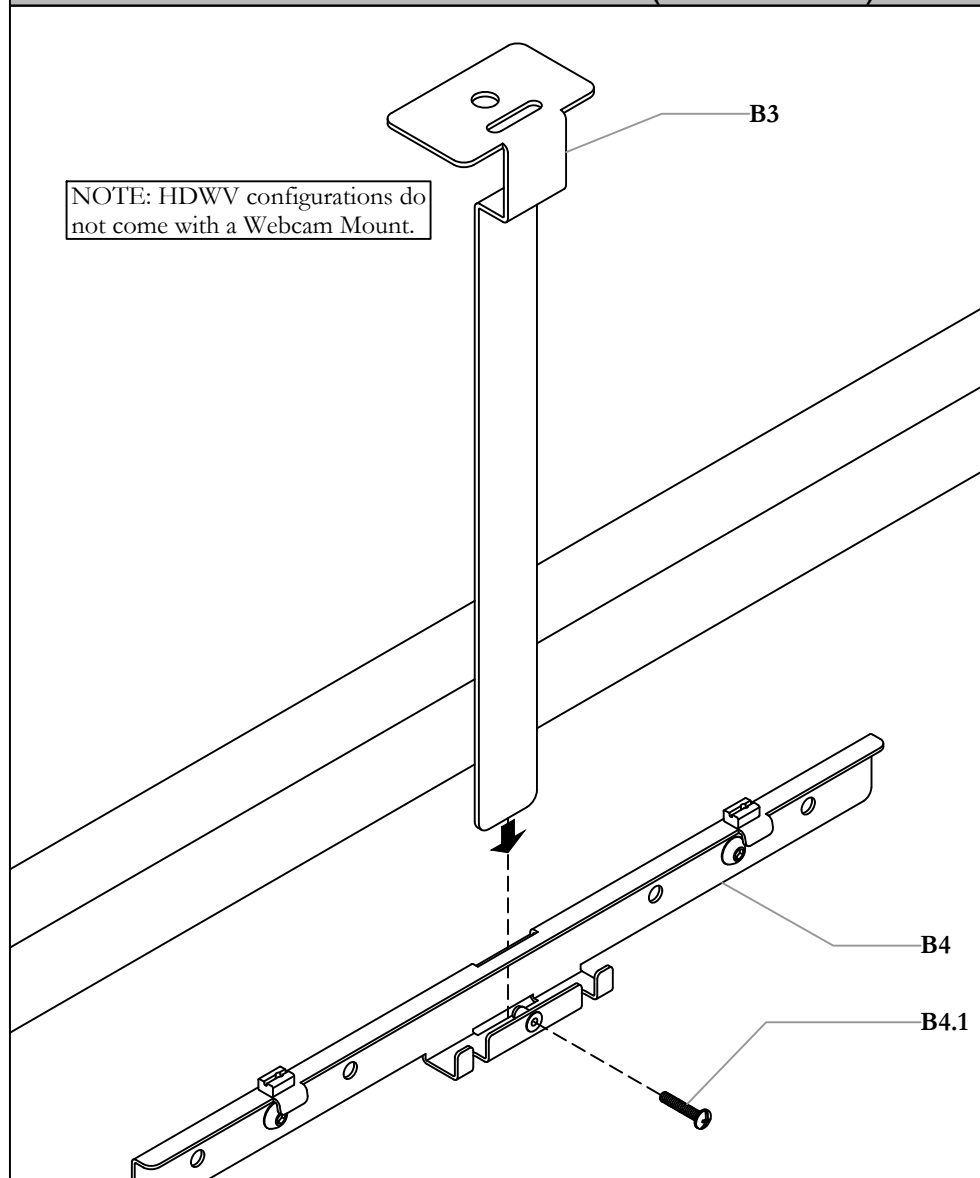

STEP 2a: Insert the Webcam Mount through the centre gap in the Top Bracket. Position the insert and the screw to line up through the hole.


Note: HDWV configurations do not come with a Webcam Mount.

ADJUST FOR HEIGHT (OPTIONAL)

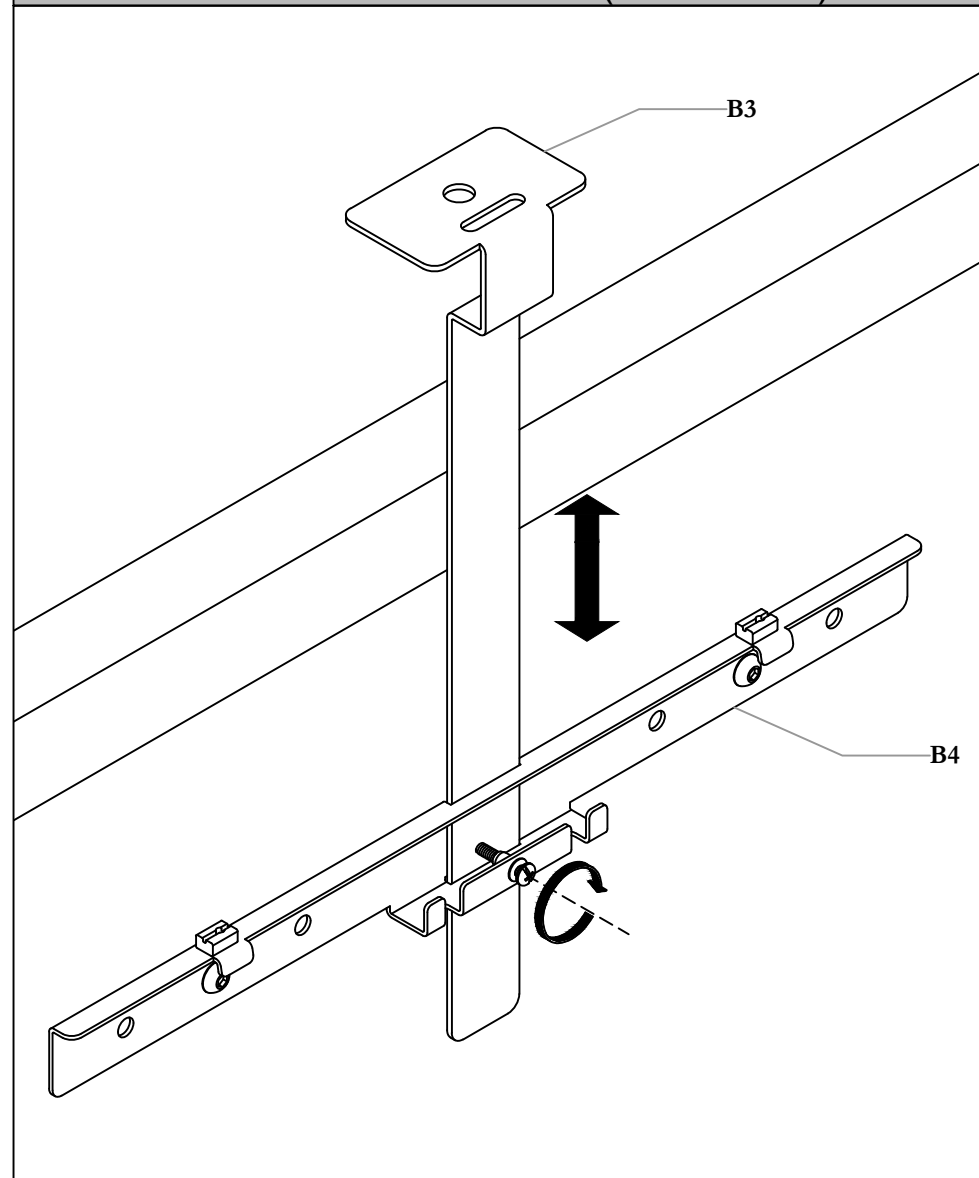


STEP 2b: Adjust the Webcam Mount to the desired height if necessary. Tighten the screw when the Webcam Mount is at desired height.

INSTALL TECH EASEL MONITOR BRACKET

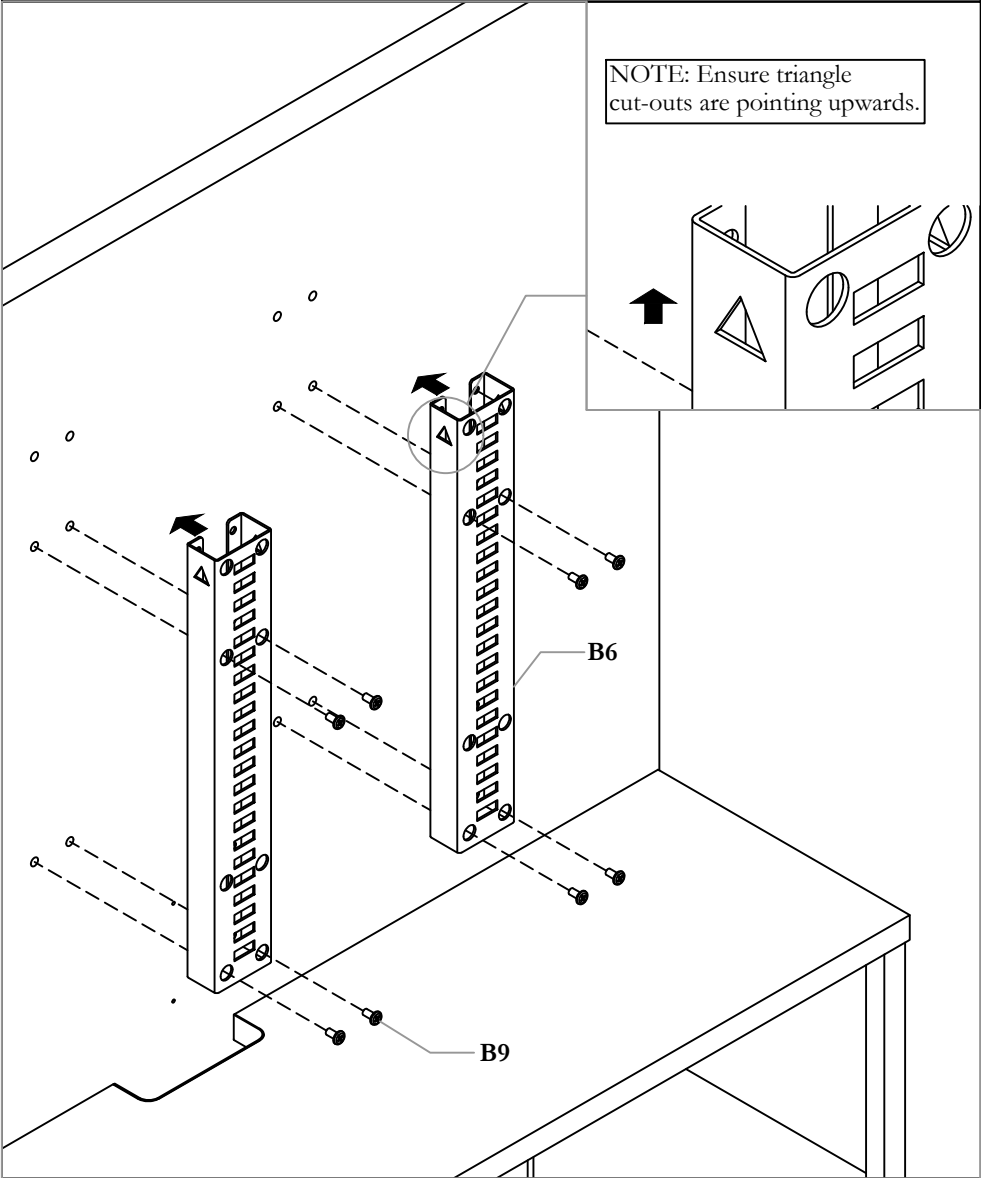

STEP 3a: Install Tech Easel Monitor Bracket. Use the pilot holes for placement. Make sure the orientation of the Brackets are correct by facing the cut-out triangles upward.

HANG TV ONTO TECH EASEL MONITOR BRACKET

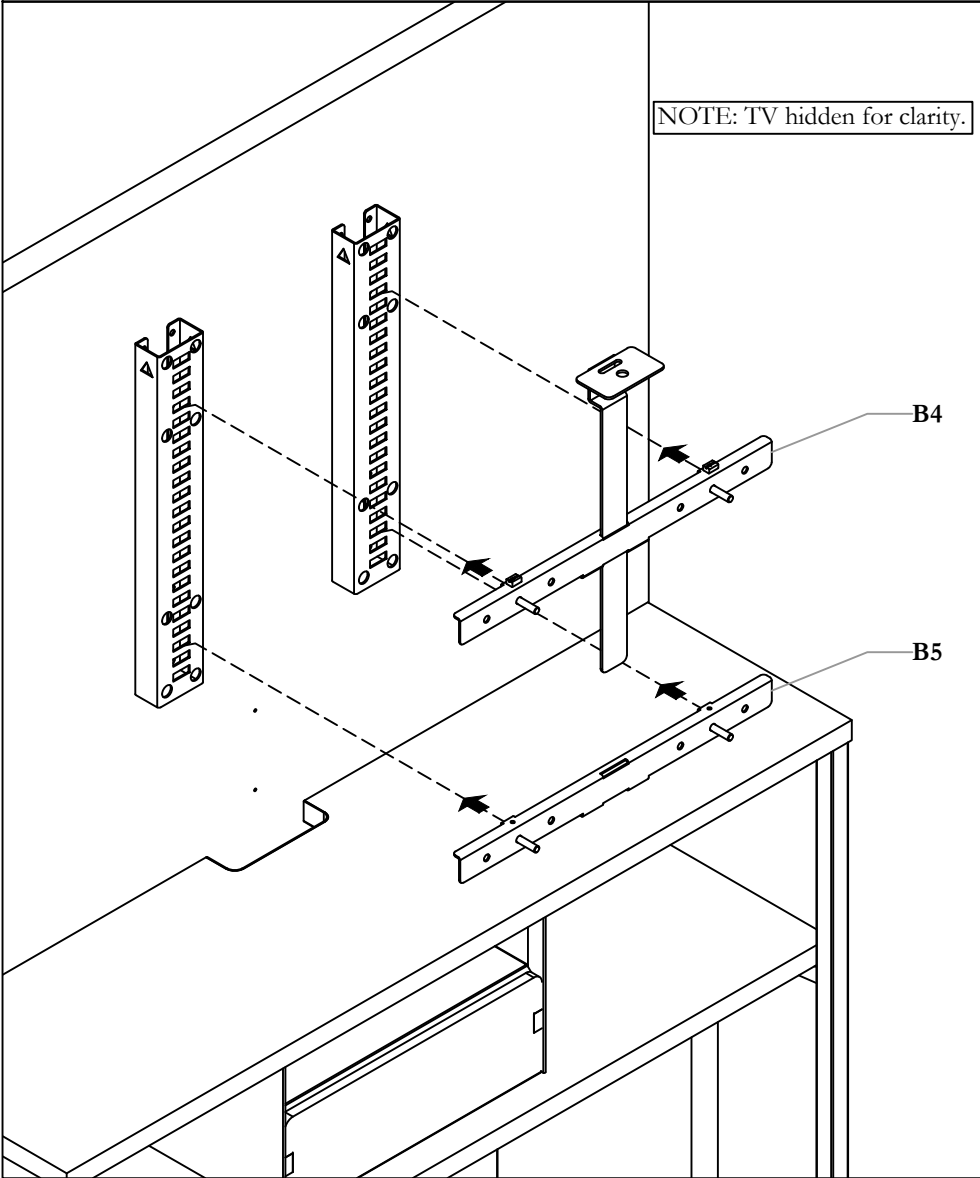

STEP 3b: Install TV onto Tech Easel Monitor Bracket.

NOTE: TV hidden for clarity.


TWO ADJUSTABLE TV MOUNT POSITIONS

LOWER POSITION OF TV MOUNT

NOTE: Camera is not included with Kiosk products, it is purchased by the customer.

Camera mount above


Fasten screws in these location

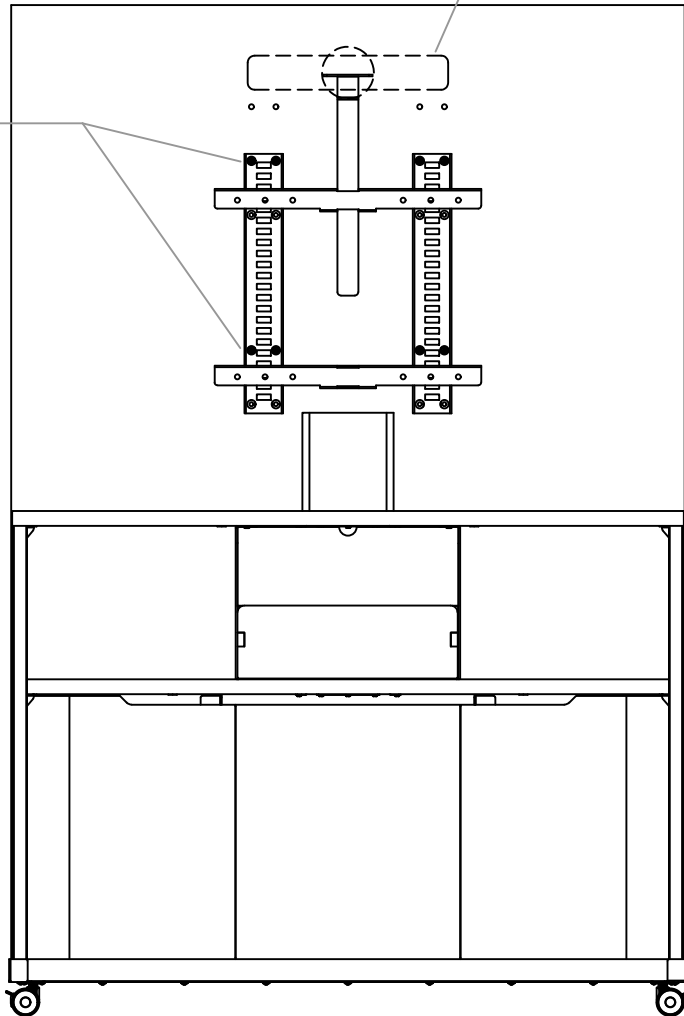

HIGHER POSITION OF TV MOUNT

Fasten screws in these location

Camera mount below

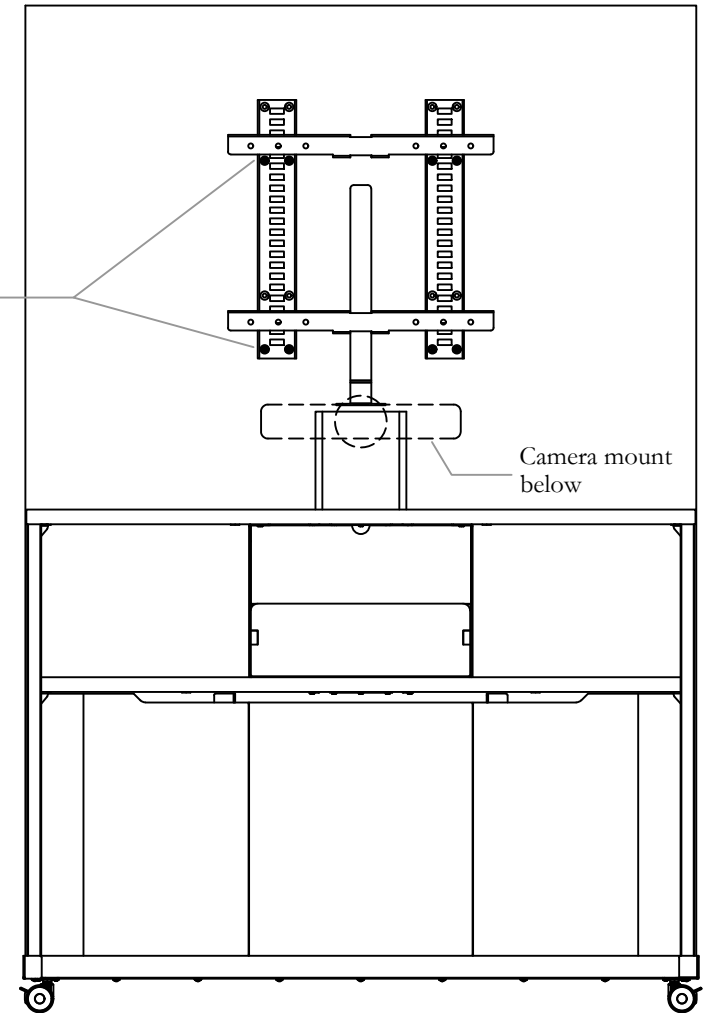


NOTE: The lower position of the TV mount allows the camera to be mounted above the TV (not shown). This orientation is optimal for environments where people are standing to ensure eye level is maintained with camera.

NOTE: The higher position of the TV mount allows the camera to be mounted below the TV (not shown). This orientation is optimal for seated height applications to ensure eye level is consistent with the camera.

TURN DISENGAGEMENT LOCK

NOTE: TV hidden for clarity.

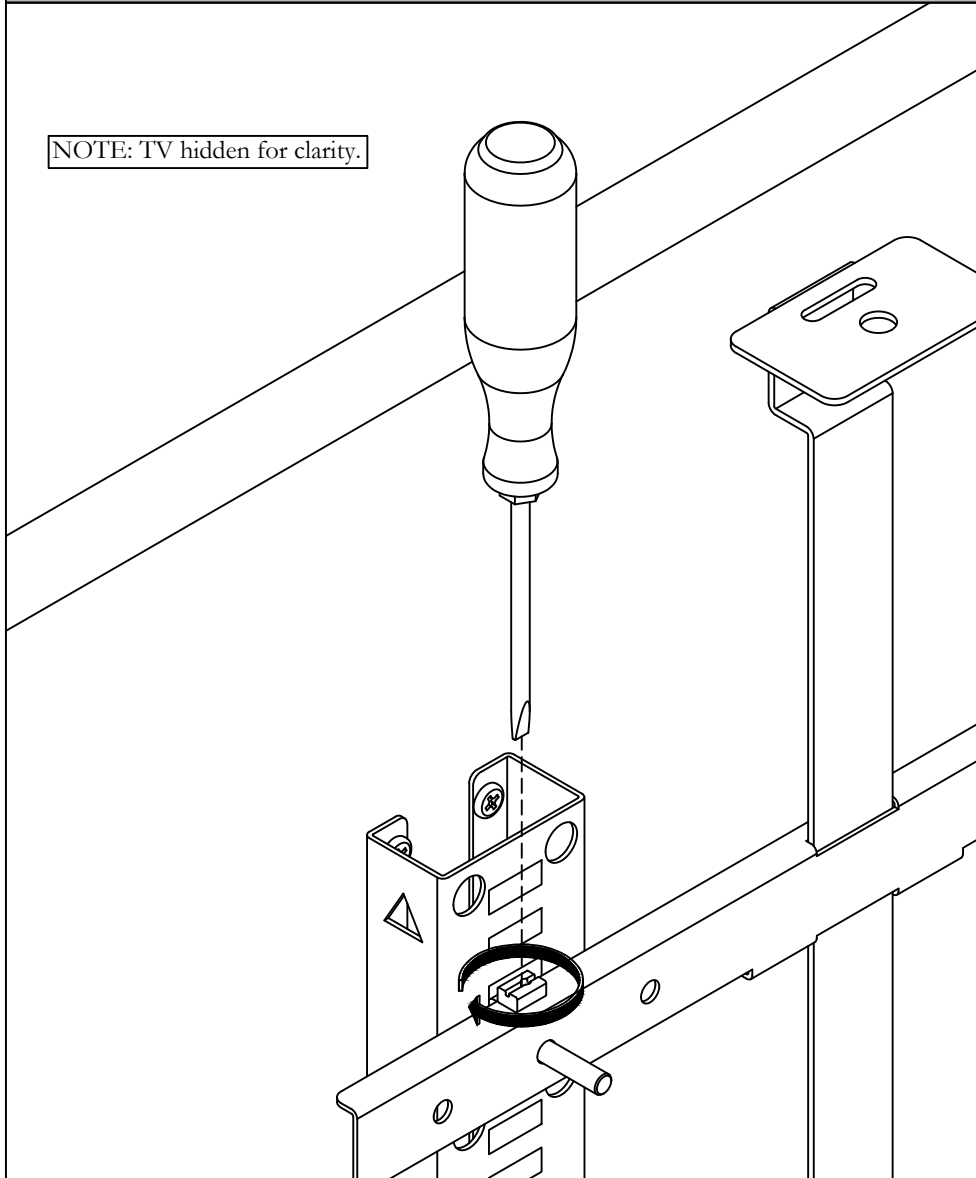


STEP 4: Turn disengagement lock on both sides to lock the Top Bracket into Place. This will prevent the TV from falling off..

NOTE: TV hidden for clarity.

INSTALL DUCT PLATE

NOTE: The Duct Plate is for HDWT configurations only.


NOTE: TV hidden for clarity.

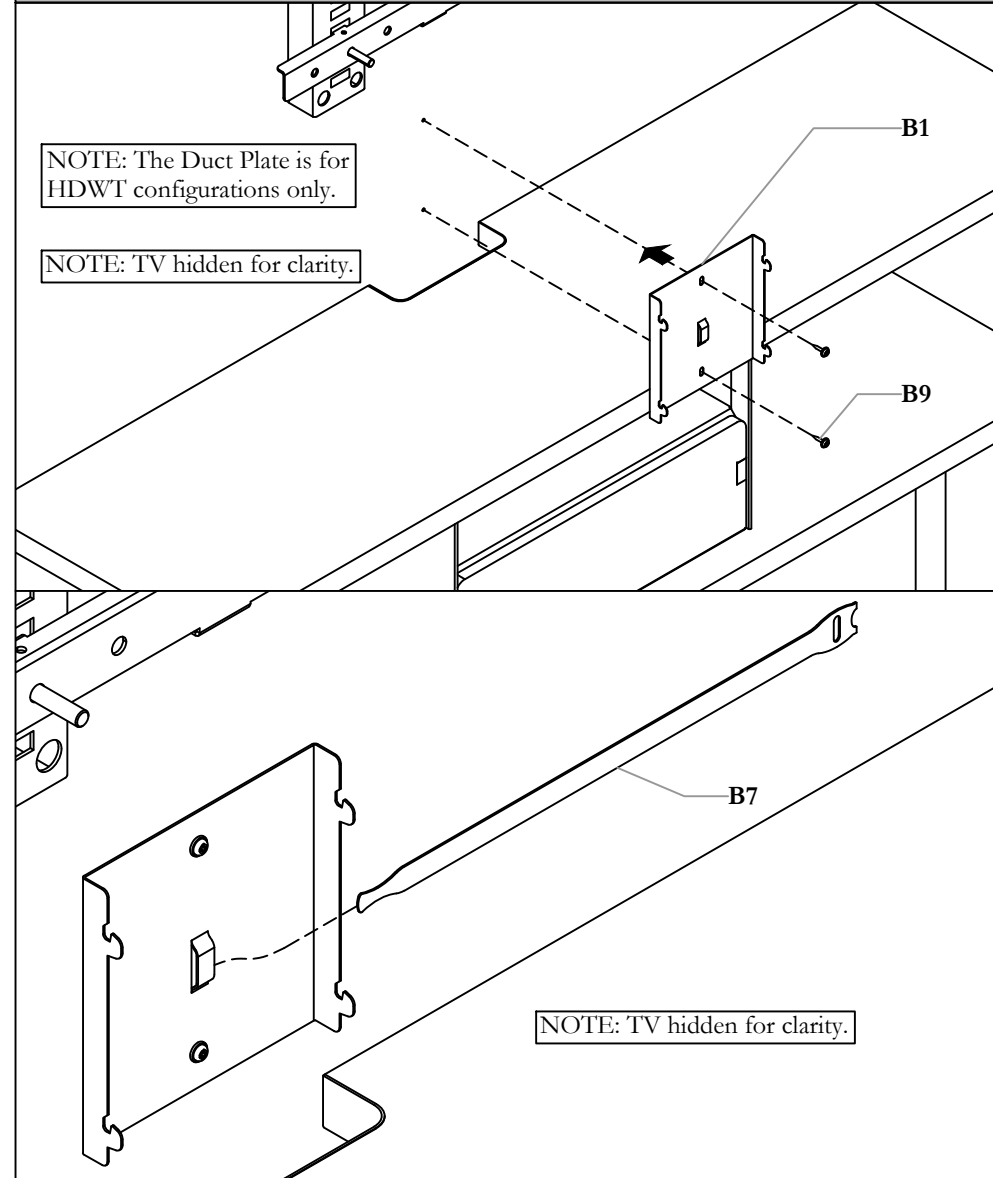

STEP 5: Install Duct Plate and place Velcro around the extruded section in the middle of the Duct Plate.


NOTE: TV hidden for clarity.

REMOVE BOTH P.E.T. COVERS

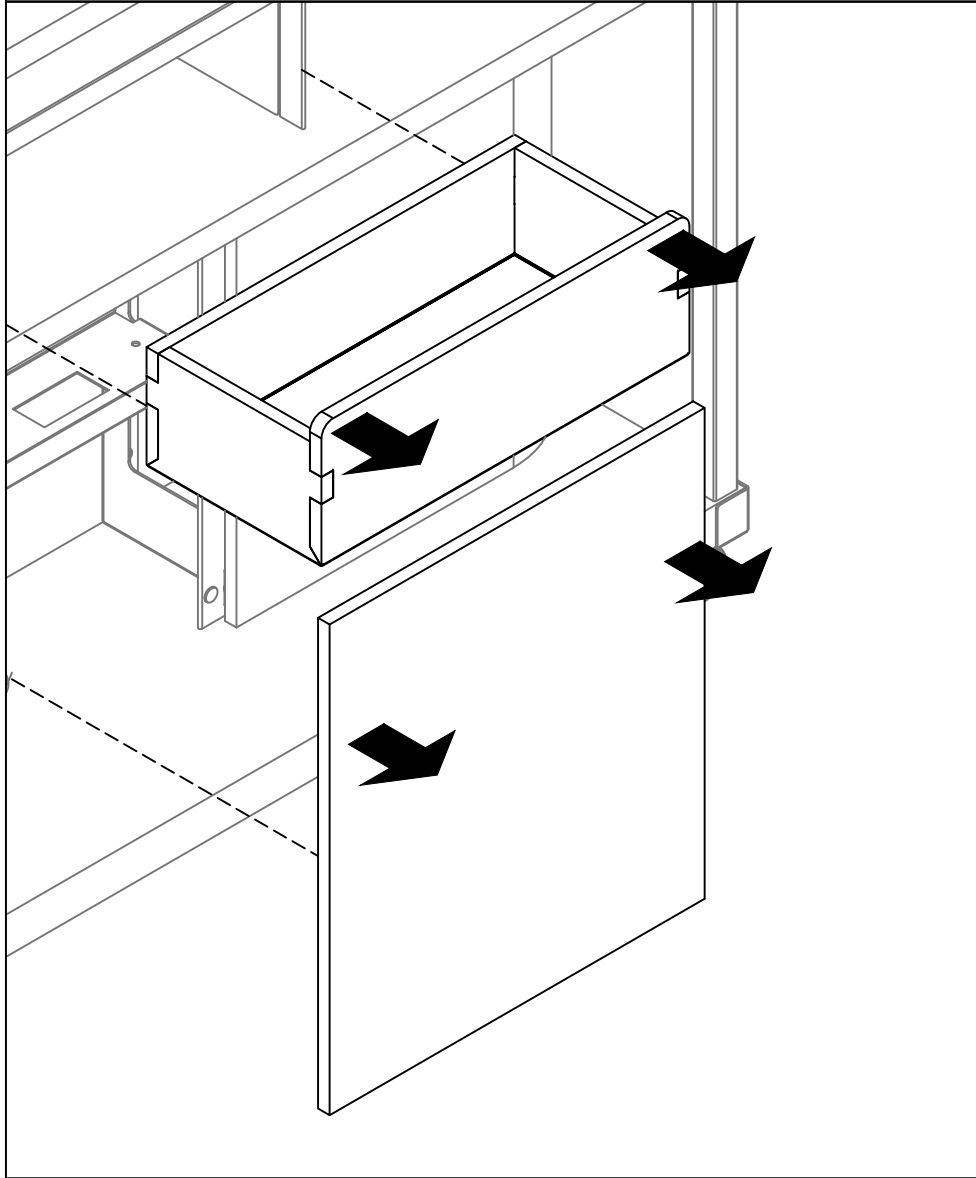


STEP 6: Remove both PET covers. The bottom one has metal brackets on its top to pull from.


ROUTE THE TV WIRING

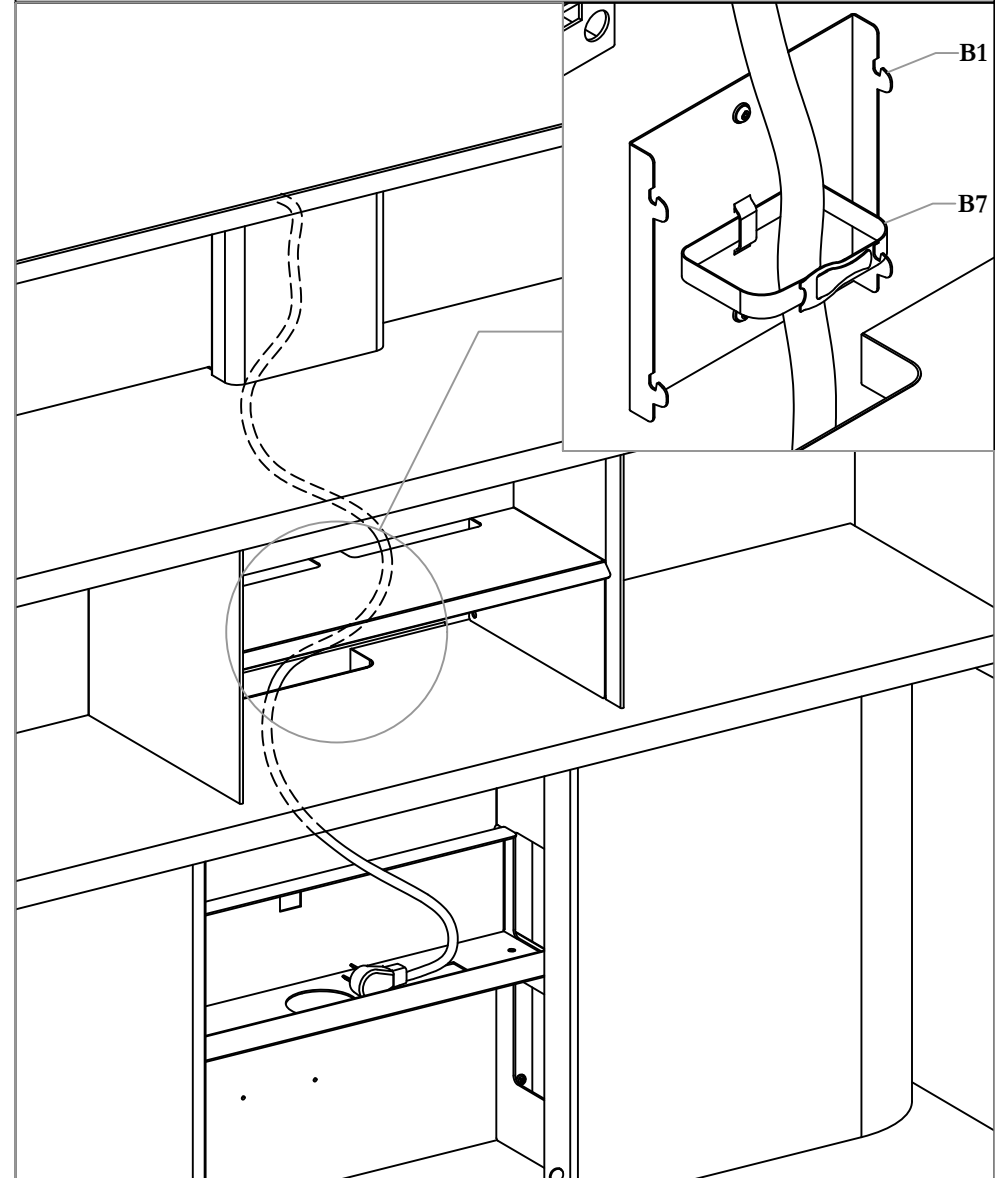

STEP 7a: Slide the wiring through the Duct Plate and through the gaps that lead into the bottom. Use additional velcro strips if necessary.

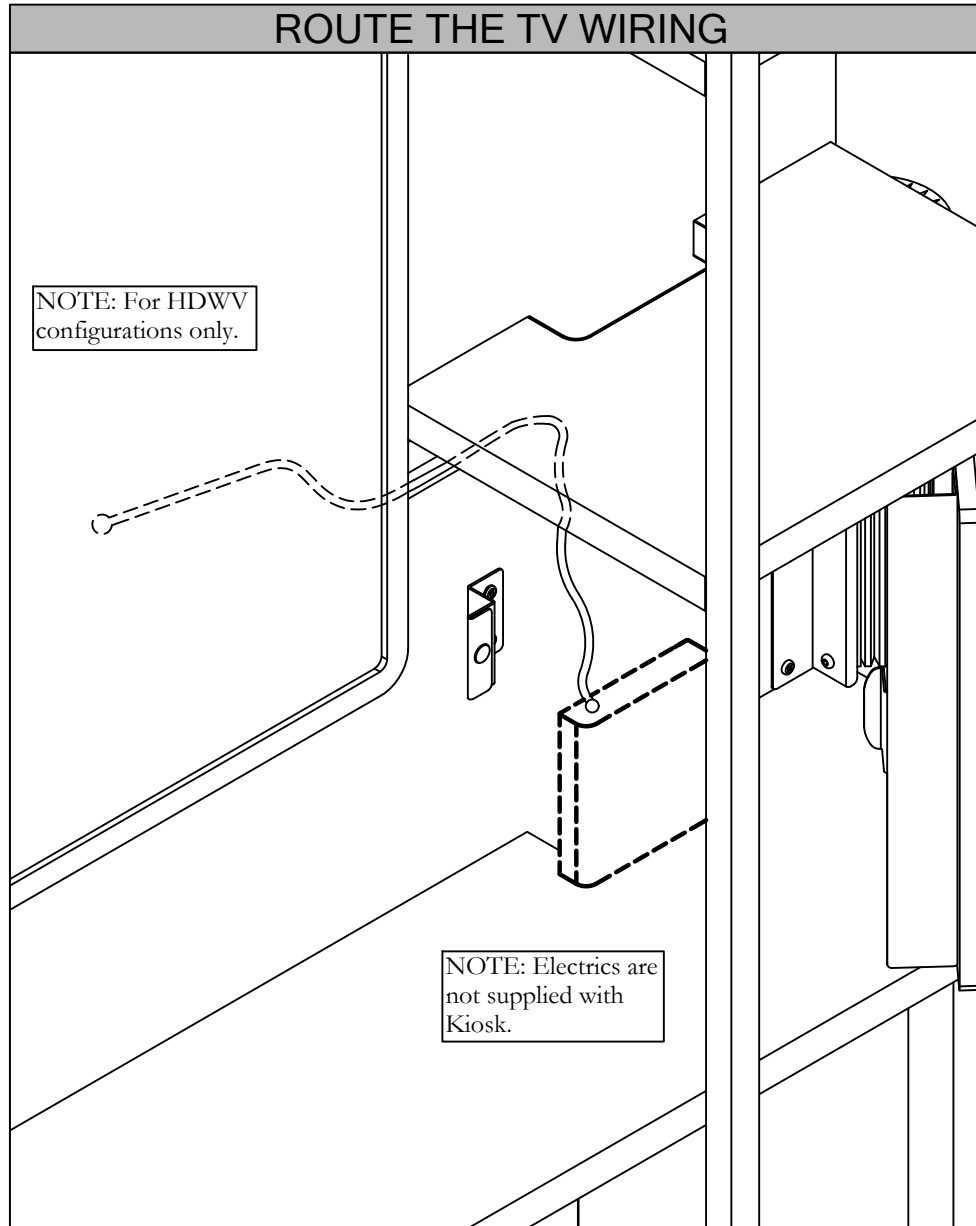


STEP 7b: For the Media Chat Kiosk (HDWV) the wire will be routed through the plastic u-channel manager, which is mounted behind the tv, travels underneath the shelf and behind the felt hinged door. The PET cover shown is closed magnetically. It can be opened by pulling on the edge with sufficient force. NOTE: For HDWV configurations only.

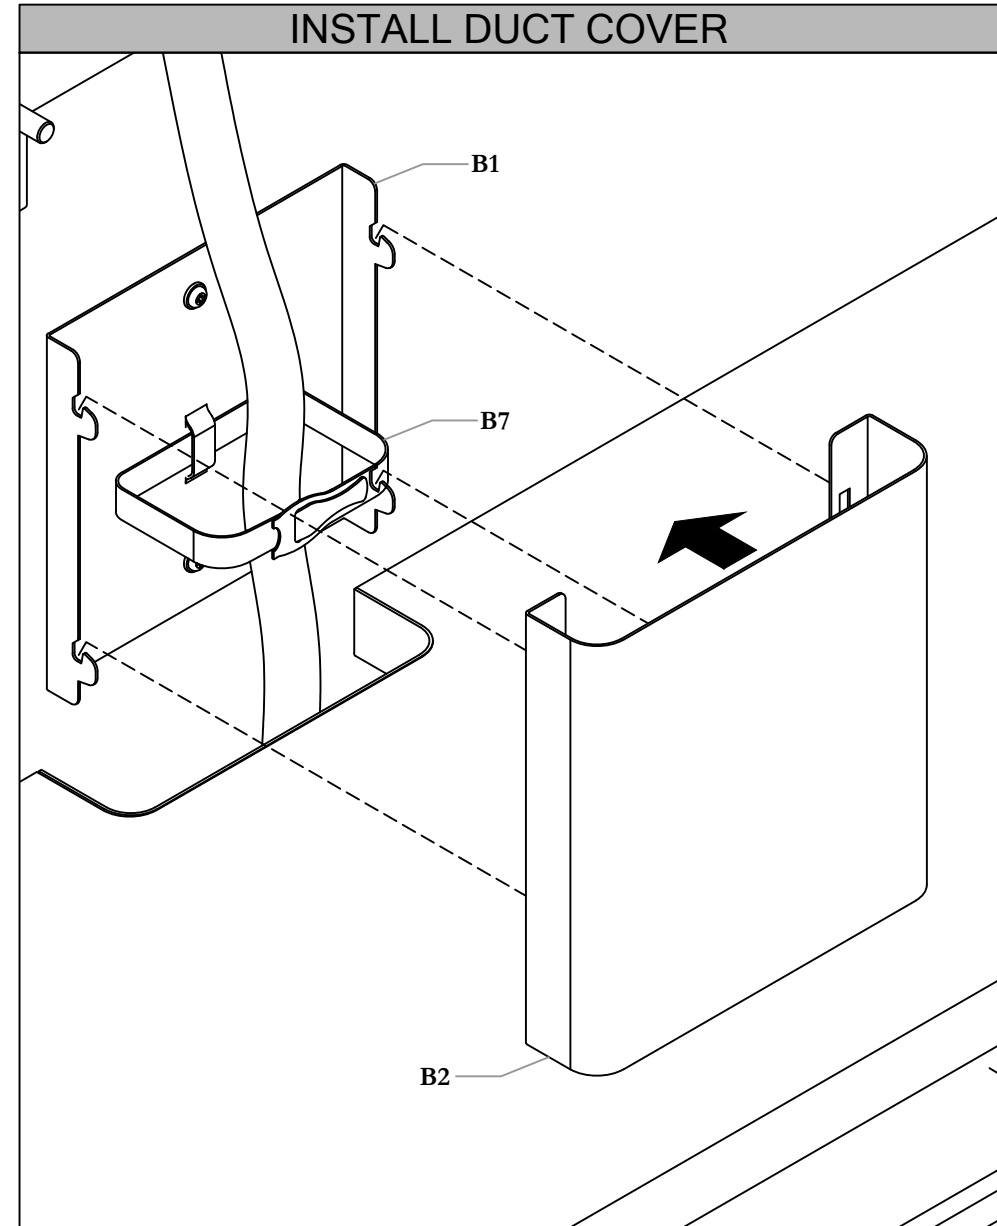


STEP 8: Hang the Duct Plate Cover onto the Duct Plate.

NOTE: TV hidden for clarity.

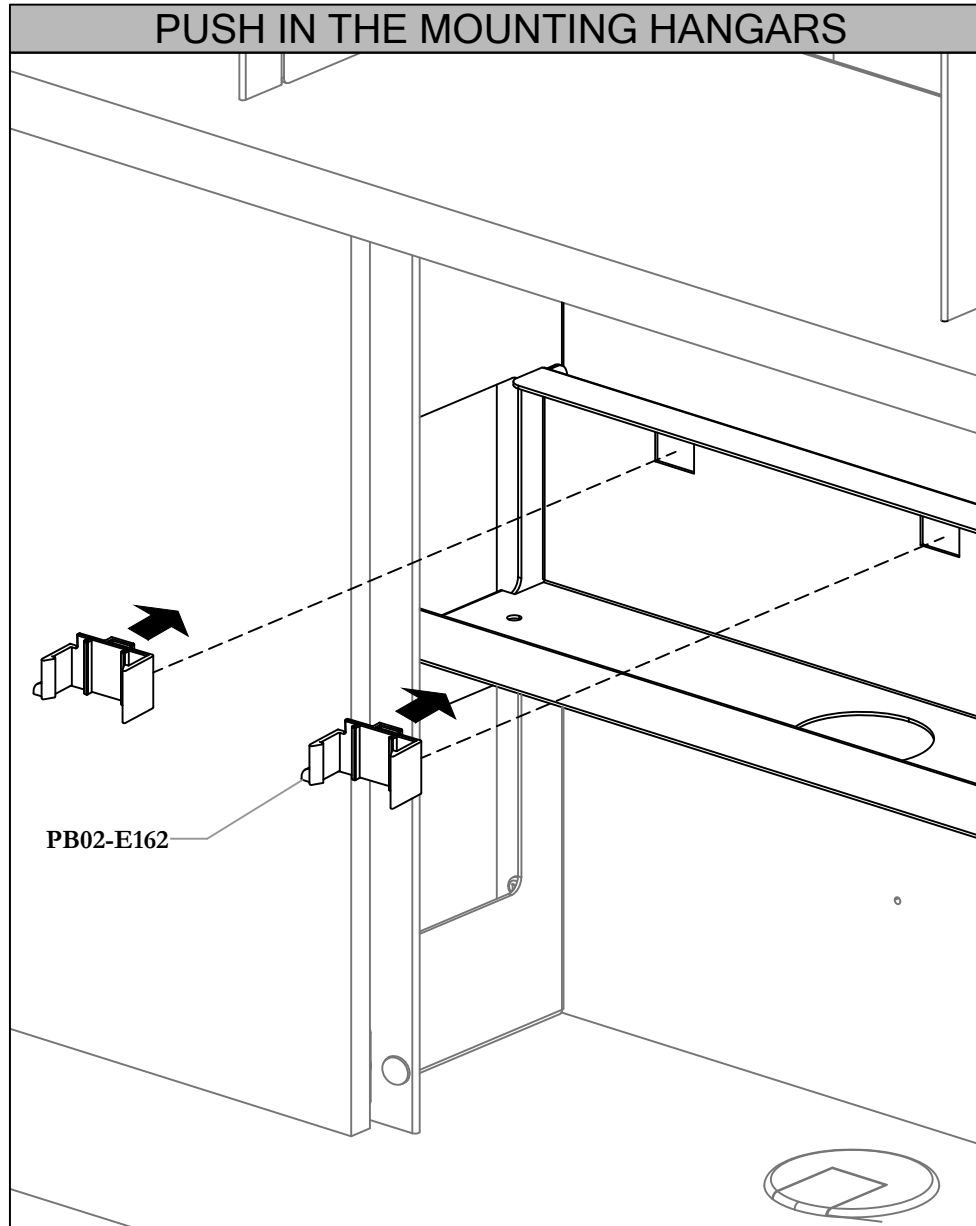


STEP 9a: Push in the Mounting Hangars into the gaps provided.

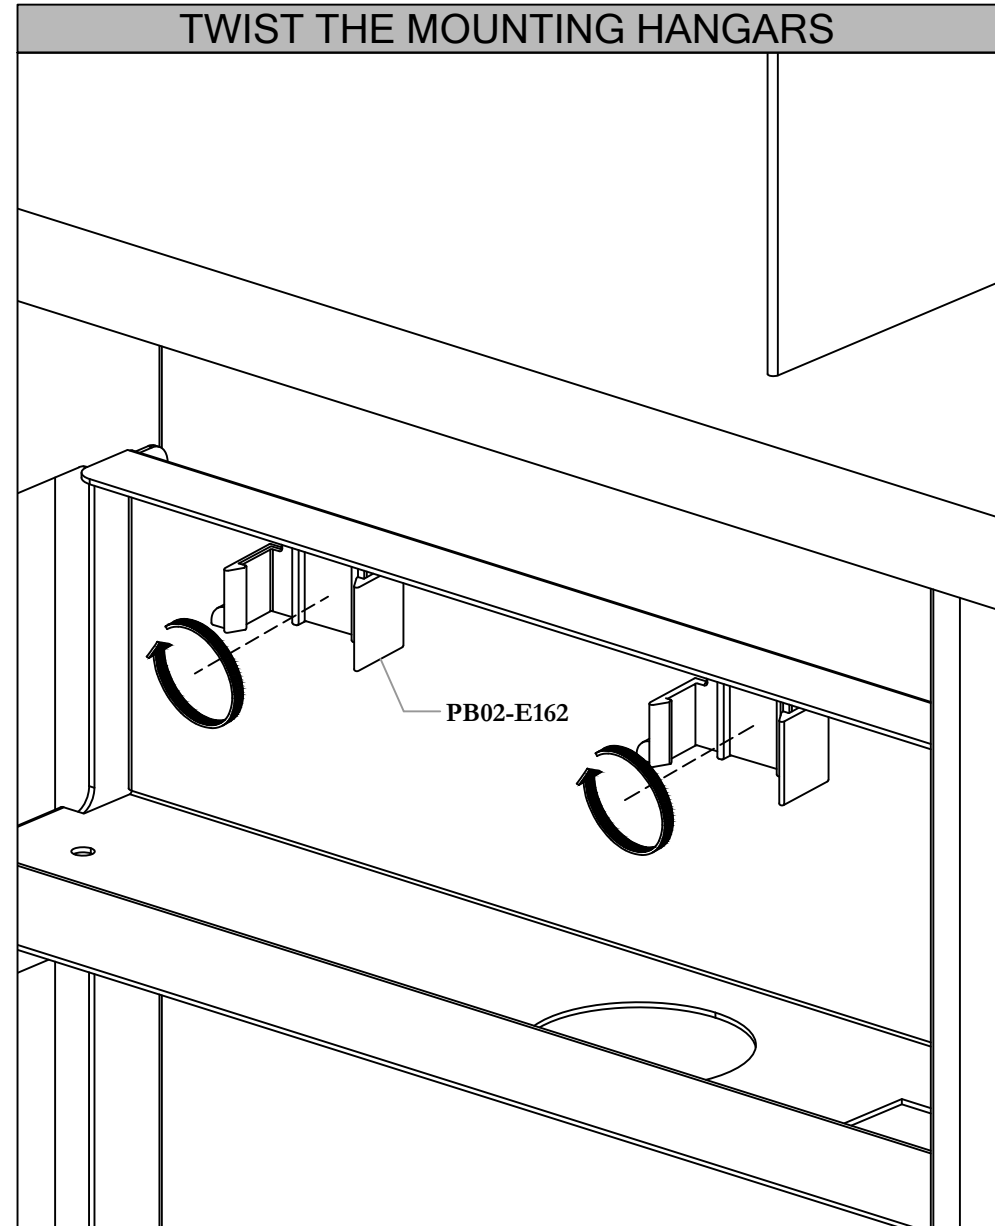


STEP 9b: Twist the Mounting Hangars clockwise 90 degrees so that they rest on the bracket.

INSTALL POWER BAR

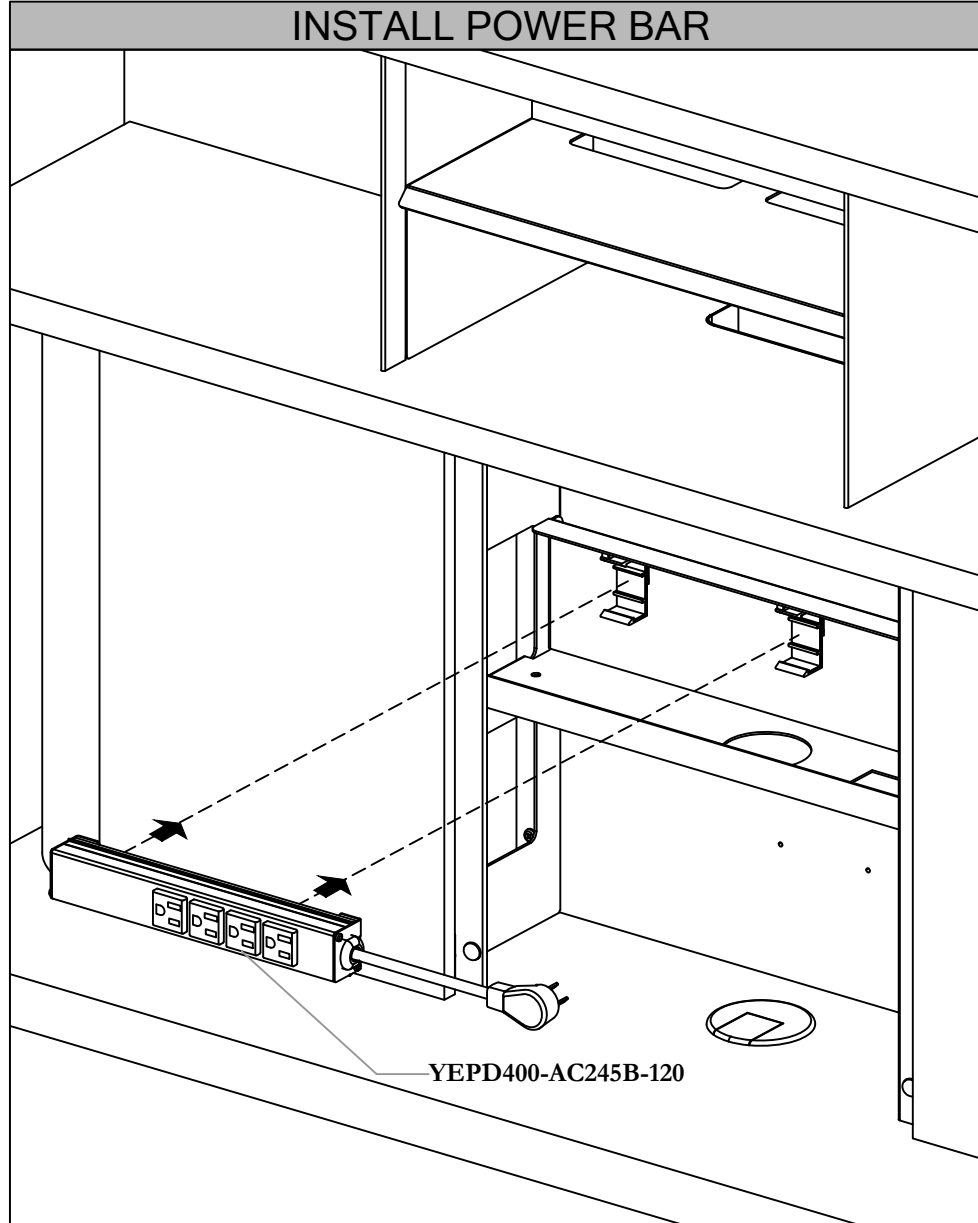

STEP 10: Snap the Power Bar onto the the Mounting Hangars.

ROUTE THE WIRING FOR THE POWER BAR

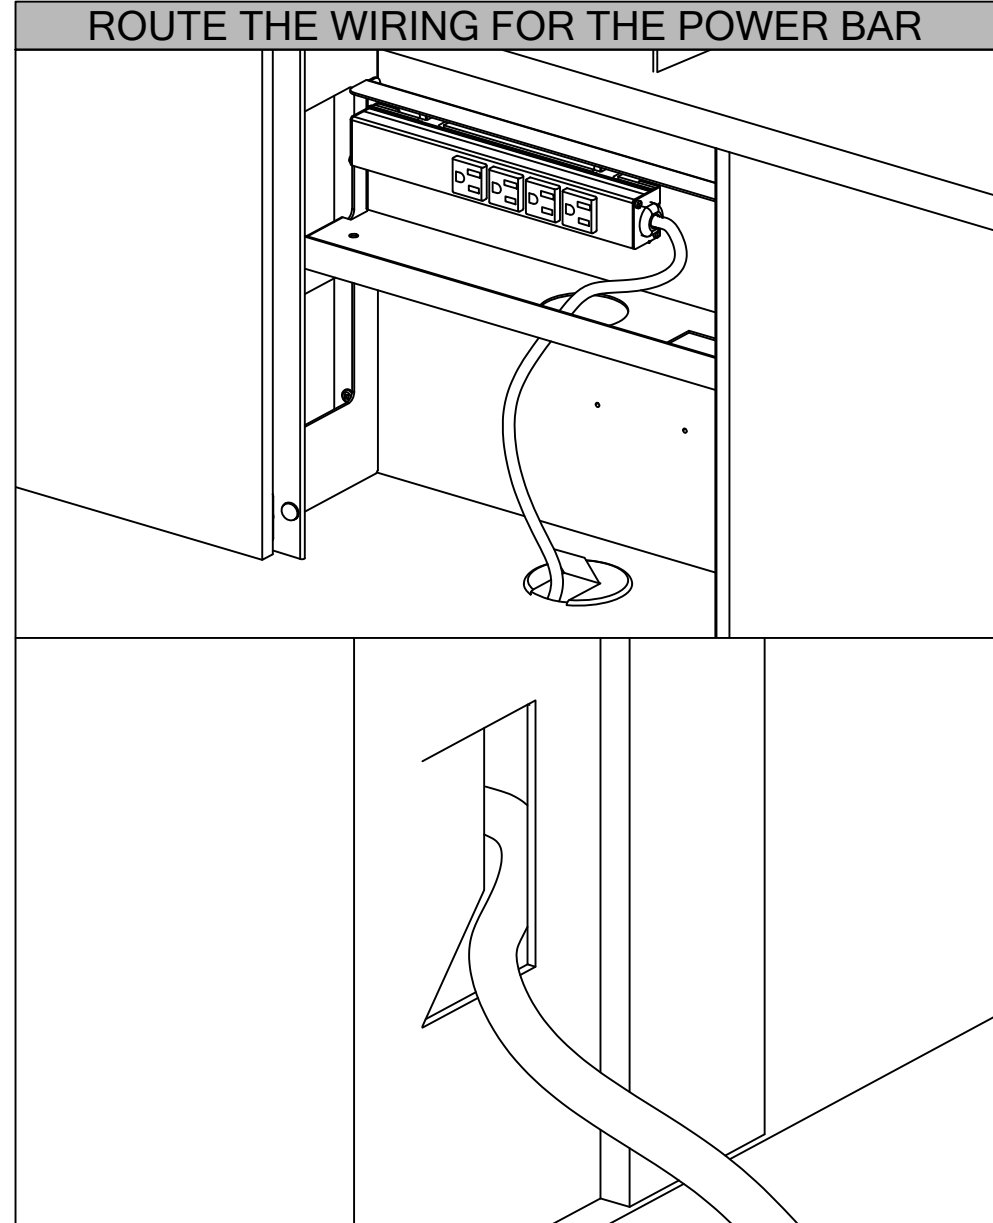

STEP 11: Route the wiring through the bottom grommet or through one of the side cutouts as shown. Use the remaining Velcro strips to manage the wiring for the power bar and TV.