




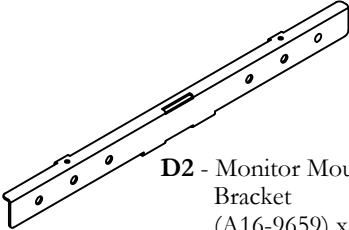
 
 
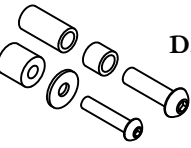





 
 
 
 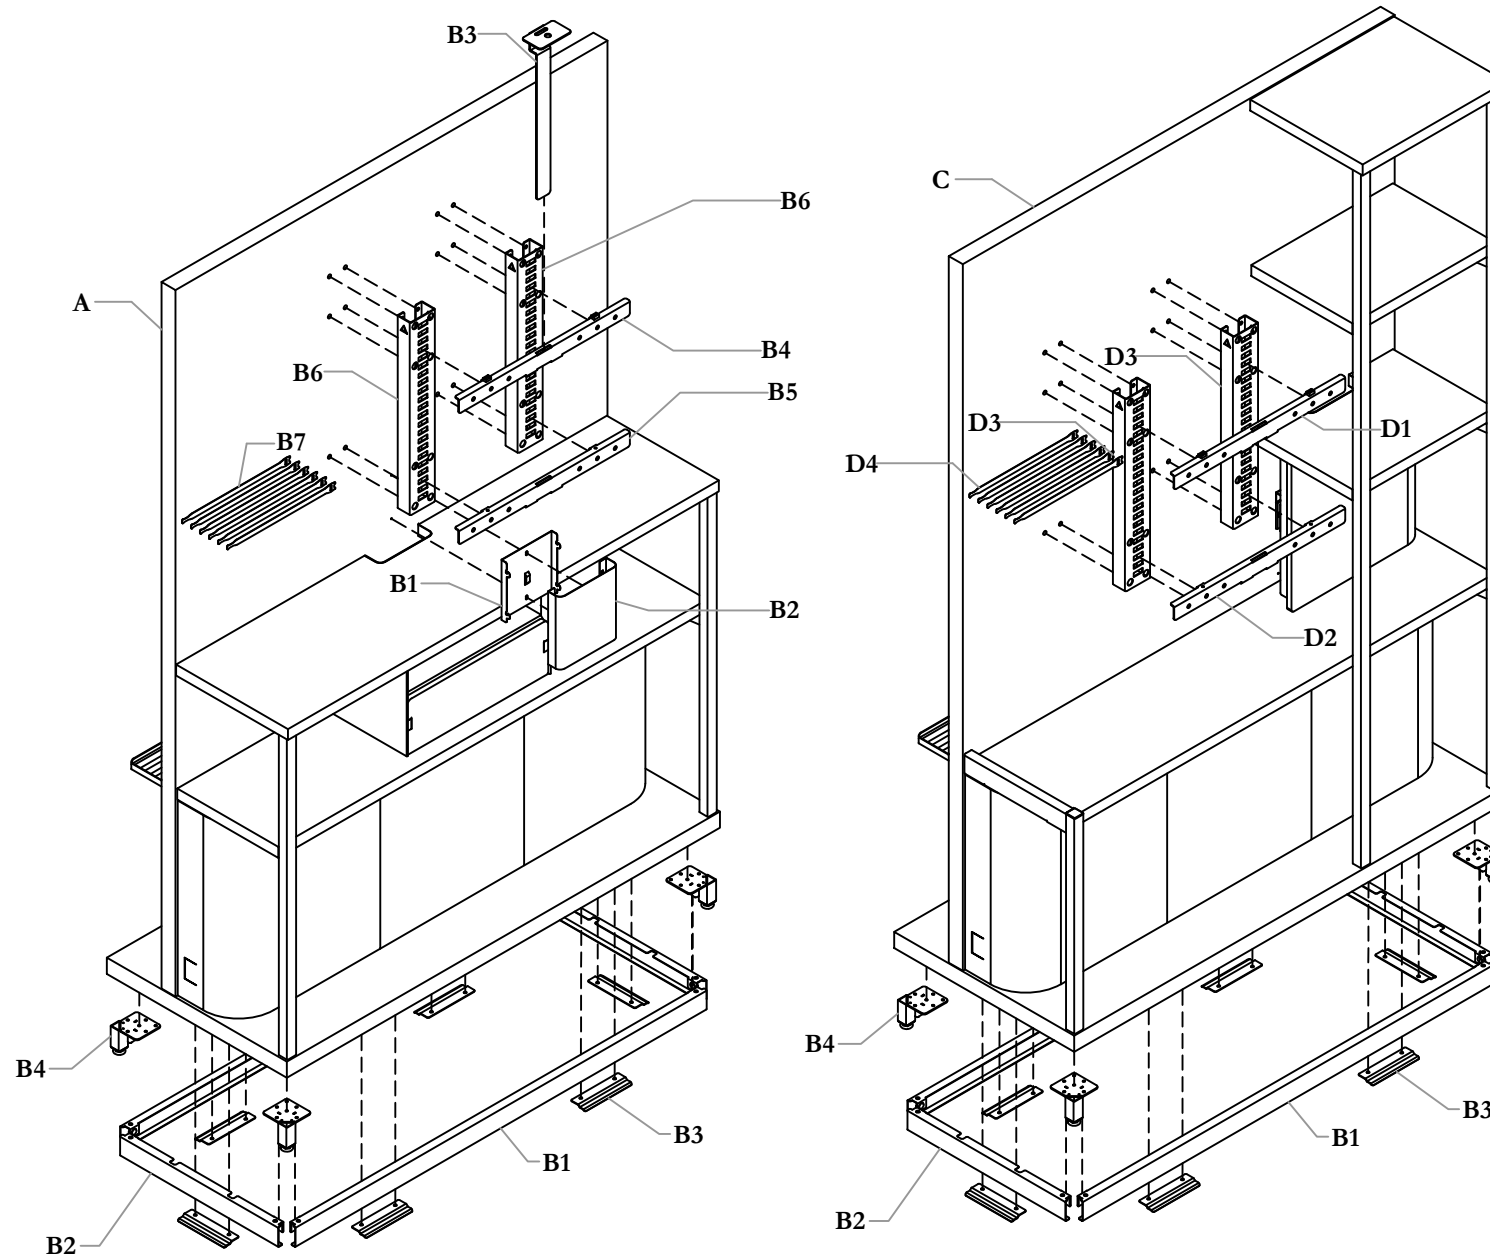
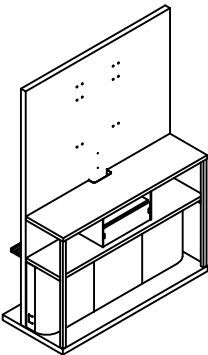



 
 

 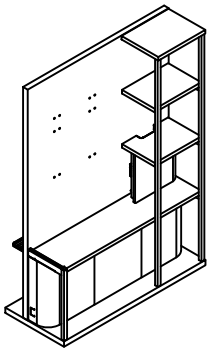



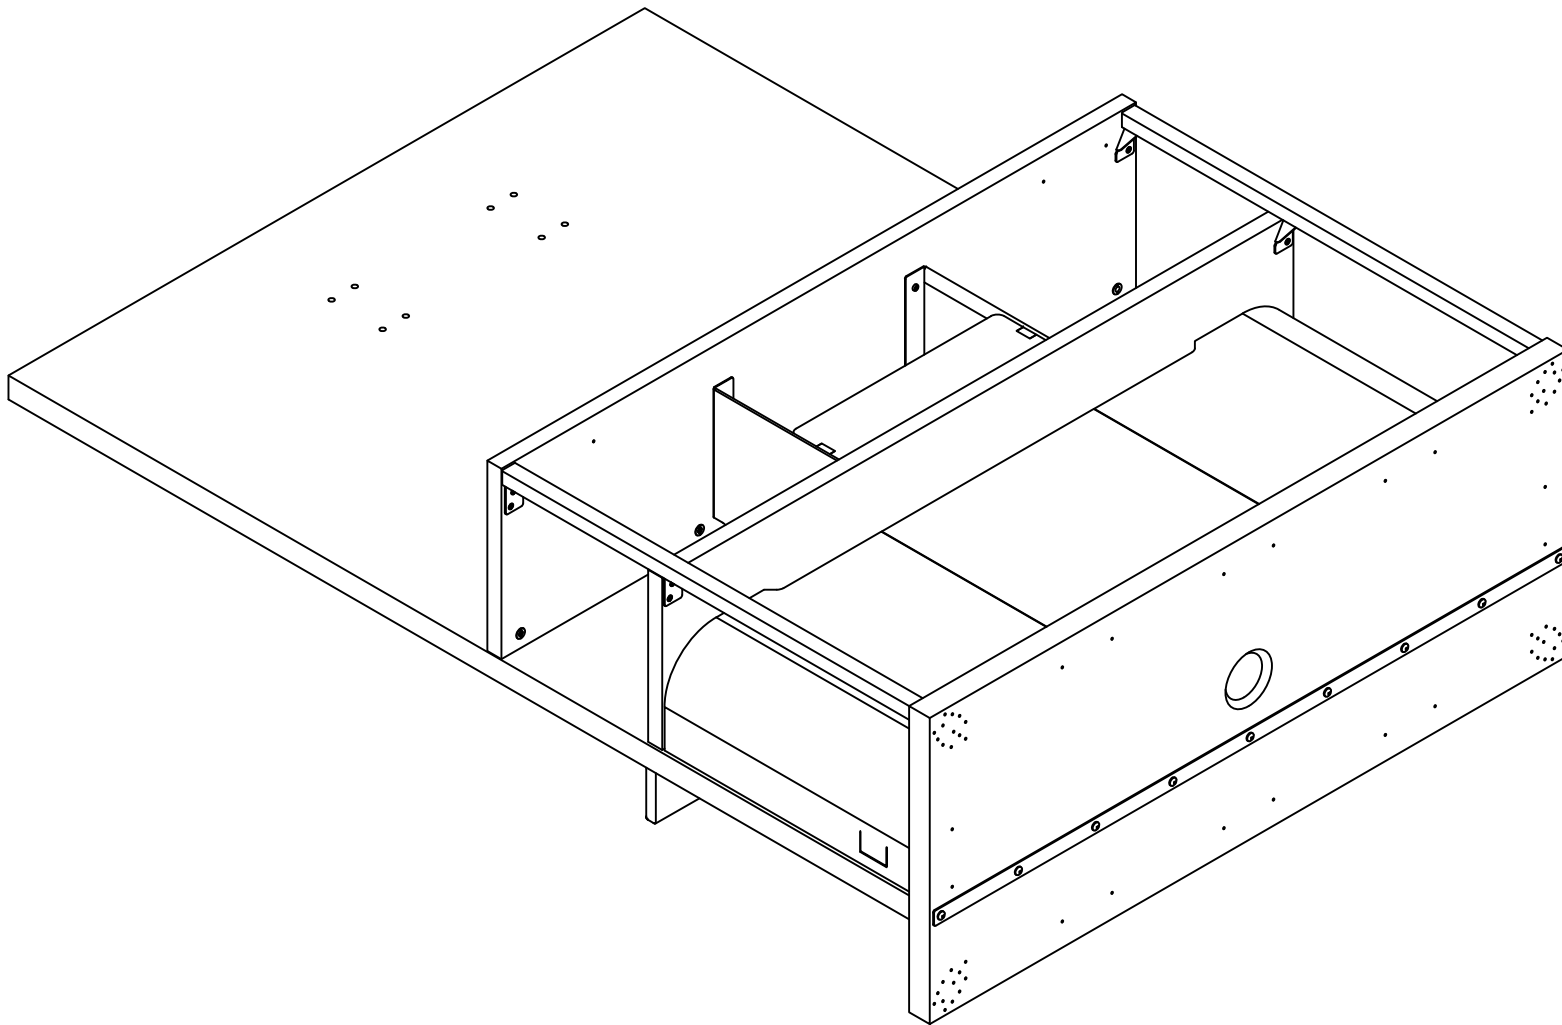
Fixed Media Kiosk (HDWTQ), Fixed Media Chat Kiosk (HDWVQ)

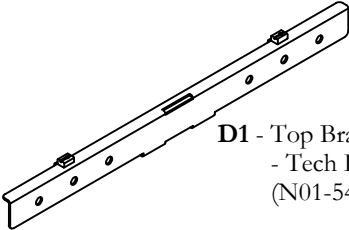

Part and Product Identification

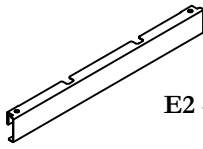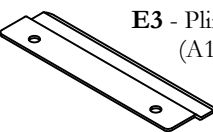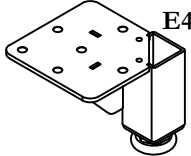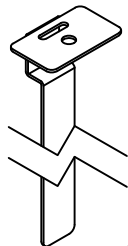
HDWTQ	or HDWVQ	TV MTG Kit- Collaboration Wall (X01-4350) x1	Retrofittable Kit (HDAK_L) x1
 <p>A - Fixed Media Kiosk (HDWTQ) x1</p>	 <p>C - Fixed Media Chat Kiosk (HDWVQ) x1</p>	 <p>D1 - Top Bracket Subassembly - Tech Easel (N01-5488) x1</p>  <p>D1.1 - MS_10-24_1.0_ST_ZN_PN_SP (E01-0133) x1</p>  <p>D2 - Monitor Mounting Bracket (A16-9659) x1</p>  <p>D3 - Tech Easel Monitor Bracket (A16-9656) x2</p>  <p>D4 - Velcro 1-Wrap Straps, 12" L (E05-0160) x6</p>  <p>D5 - ClubTalk TV Mount Screw and Spacer Kit (X01-2257) x1</p>  <p>D6 - MS_1/4-20x0.5_ST_ZN_PN_QD (E01-0141) x12</p>	 <p>E1 - Skirt Assembly - Front and Back (N01-9865-X) x2</p>  <p>E2 - Skirt Assembly - Sides (N01-9864) x2</p>  <p>E3 - Plinth Mounting Bracket (A16-11821) x6 or x8</p>  <p>E4 - Kiosk Leg Assembly (N01-9611) x4</p>  <p>E5 - #10x1.00" Screw (E04-0110) x24</p>  <p>E6 - #10x1.00" Screw (E07-0097) x12 or x16</p>
TV MTG Kit- Collaboration Wall (X01-4190) x1			
 <p>B1 - Duct Plate (A16-10672) x1</p>  <p>B2 - Duct Cover (A16-10671) x1</p>  <p>B3 - Camera Mount Bracket (A16-10678) x1</p>  <p>B4 - Top Bracket Subassembly - Tech Easel (N01-5488) x1</p>  <p>B4.1 - MS_10-24_1.0_ST_ZN_PN_SP (E01-0133) x1</p>  <p>B5 - Monitor Mounting Bracket (A16-9659) x1</p>	 <p>B6 - Tech Easel Monitor Bracket (A16-9656) x2</p>  <p>B7 - Velcro 1-Wrap Straps, 12" L (E05-0160) x6</p>  <p>B8 - ClubTalk TV Mount Screw and Spacer Kit (X01-2257) x1</p>  <p>B9 - WS_#8x0.625_ST_ZN_WH_QD (E04-0049) x2</p>  <p>B10 - MS_1/4-20x0.5_ST_ZN_PN_QD (E01-0141) x12</p>		

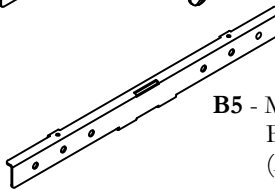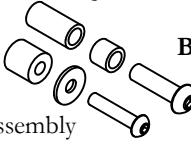PLACE KIOSK HORIZONTALLY




STEP 1: Place desired Kiosk horizontally in order to safely install Legs.

ATTACH LEGS

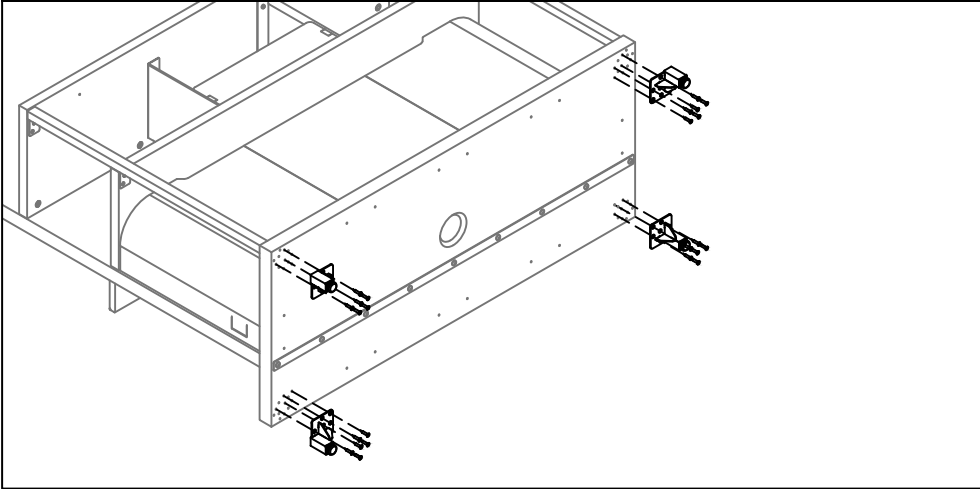


STEP 2: Secure Kiosk Leg Assemblies to Kiosk using provided Screws.

ATTACH MOUNTING BRACKETS

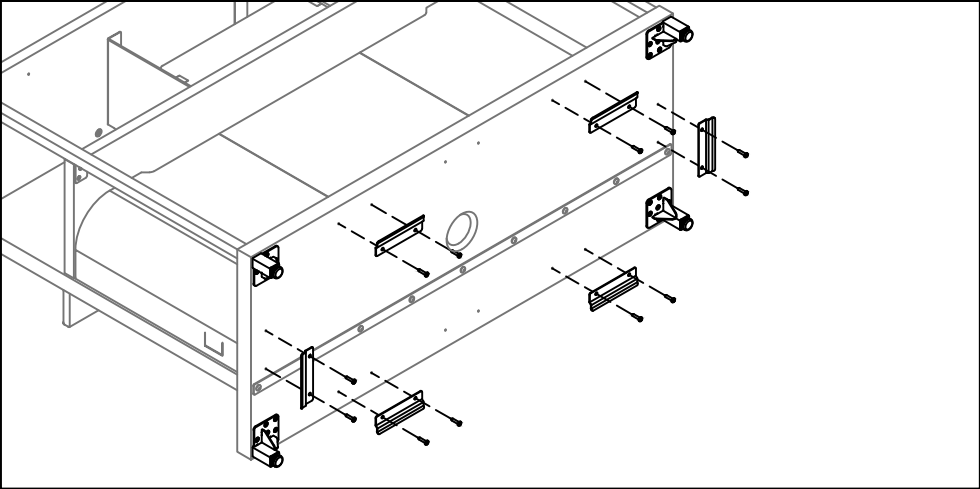


STEP 3: Secure Mounting Brackets to Kiosk using provided Screws.

PLACE KIOSK VERTICALLY AND LEVEL

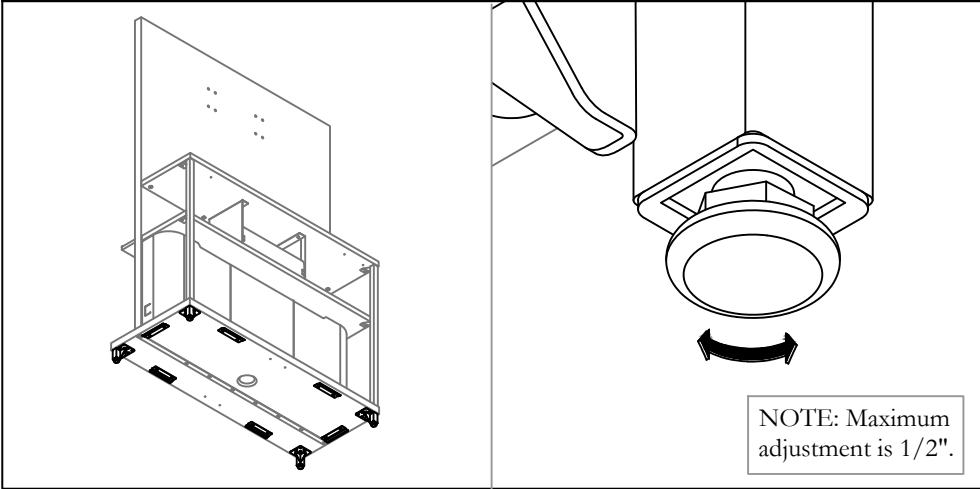


STEP 4: Move Kiosk into the vertical position and adjust levelers before attaching Skirts.

ATTACH SKIRTS

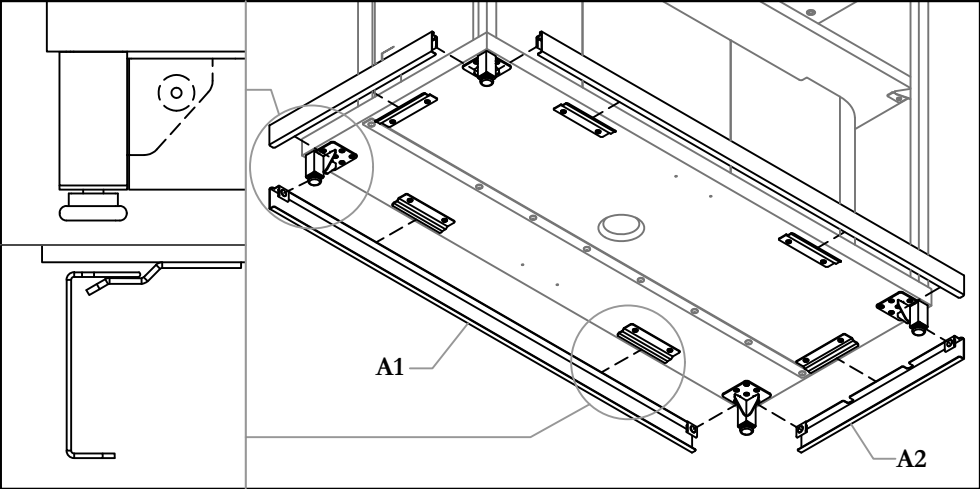

STEP 5: Attach Front, Back and Side Skirts to the Kiosk Legs using the magnets on the Skirts. Ensure that the tabs of the Skirts go under the Mounting Brackets.

ATTACH TV MOUNT TO TV

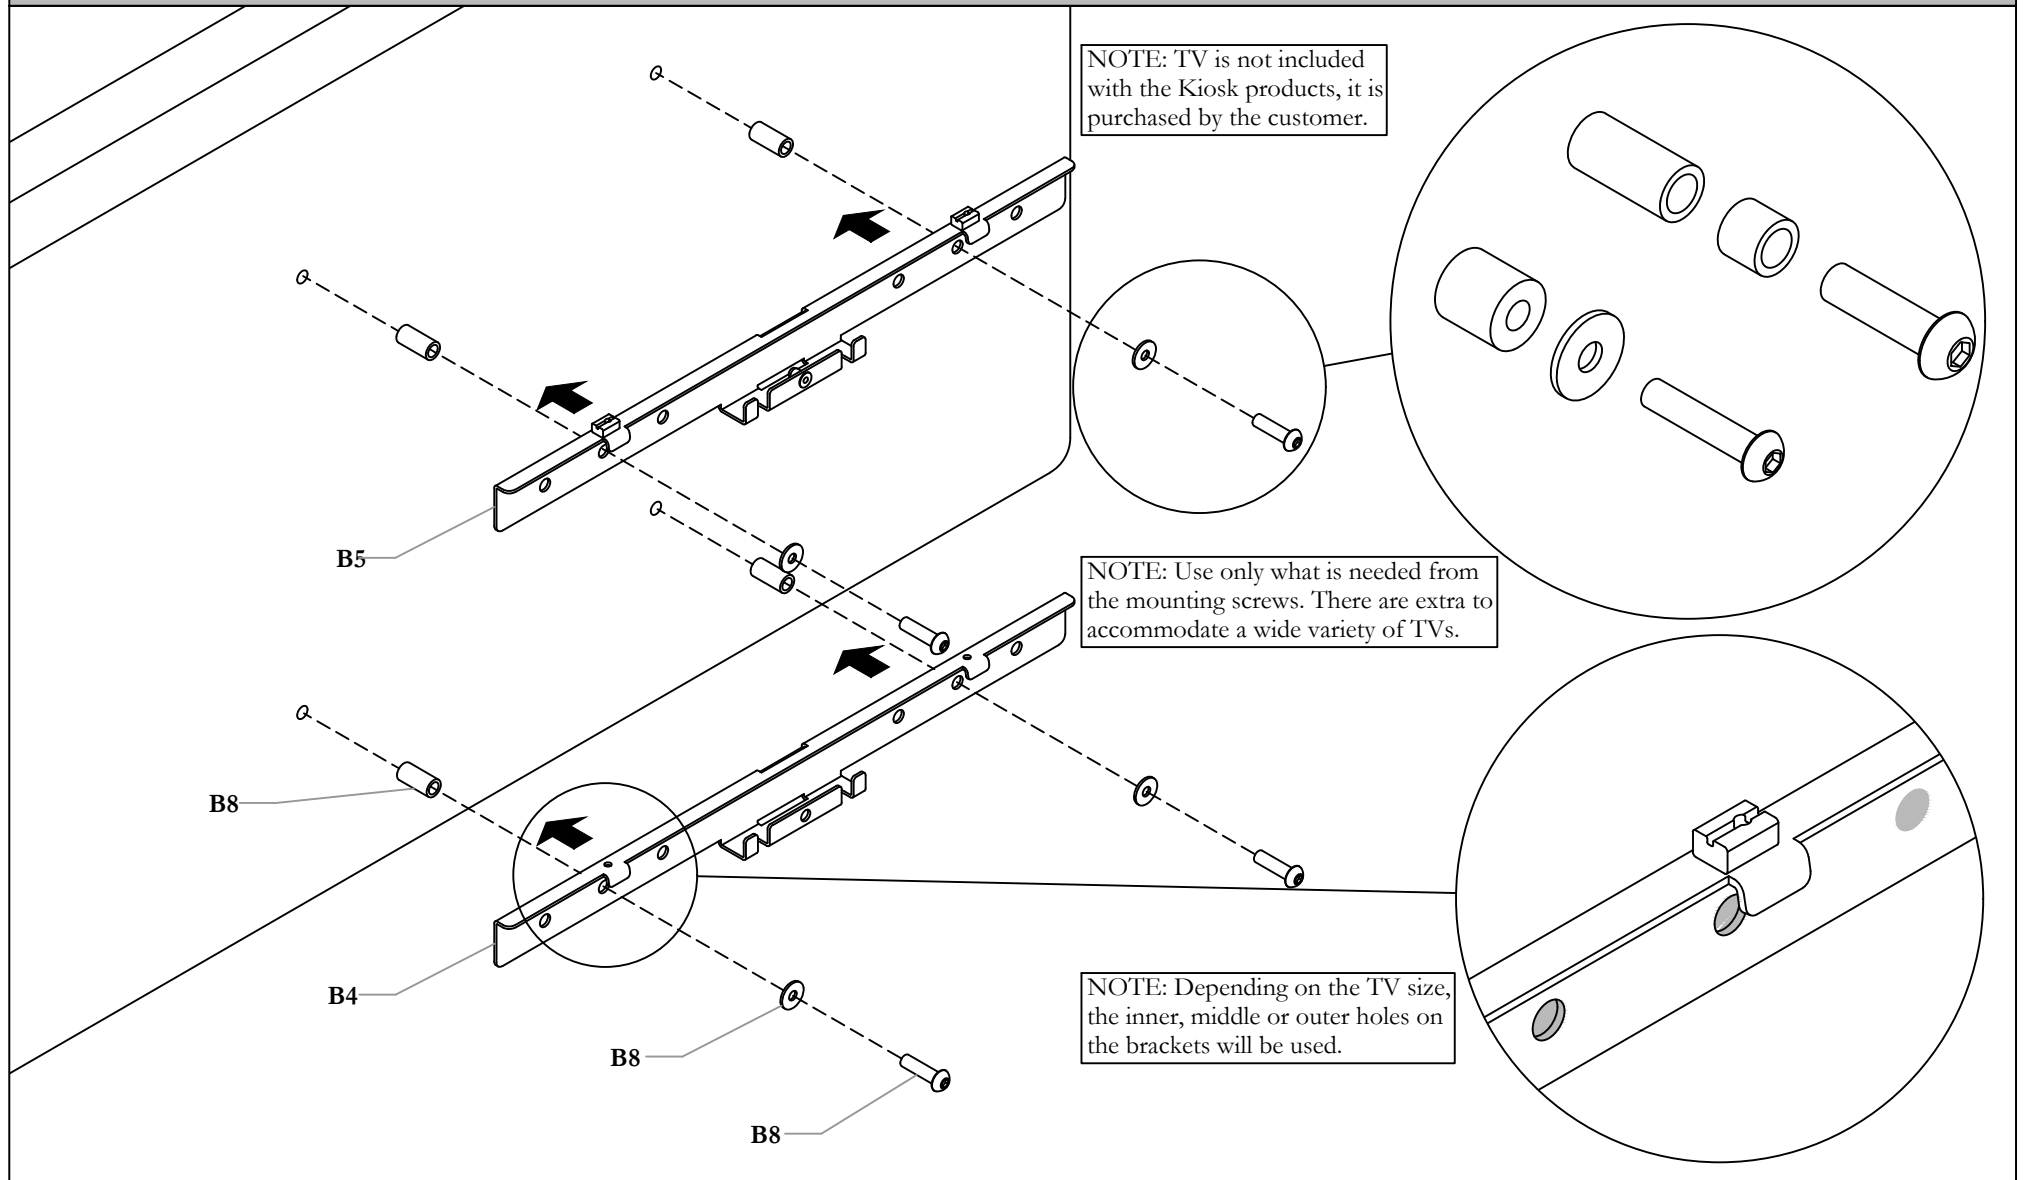


STEP 6: Attach the Top Bracket and Monitor Mounting Bracket to the TV of choice. The mounting kit hardware comes with screws, spacers and washers of various sizes to suit the TV of choice. Use the screws needed from the TV mounting set.

NOTE: TV is not included with the Kiosk products, it is purchased by the customer.

NOTE: Use only what is needed from the mounting screws. There are extra to accommodate a wide variety of TVs.

NOTE: Depending on the TV size, the inner, middle or outer holes on the brackets will be used.


INSTALL WEBCAM MOUNT (OPTIONAL)

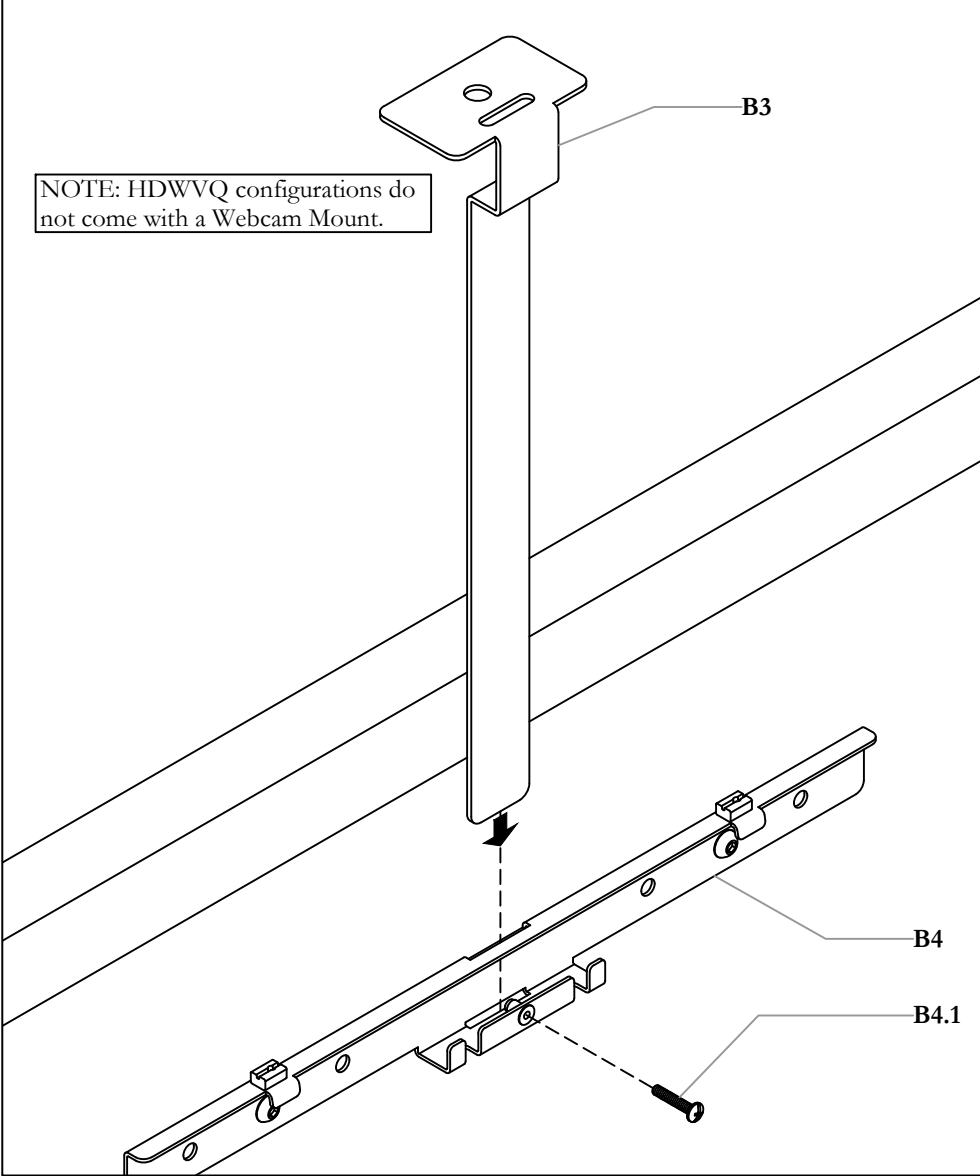


STEP 7a: Insert the Webcam Mount through the centre gap in the Top Bracket. Position the insert and the screw to line up through the hole.

Note: HDVVQ configurations do not come with a Webcam Mount.


ADJUST FOR HEIGHT (OPTIONAL)

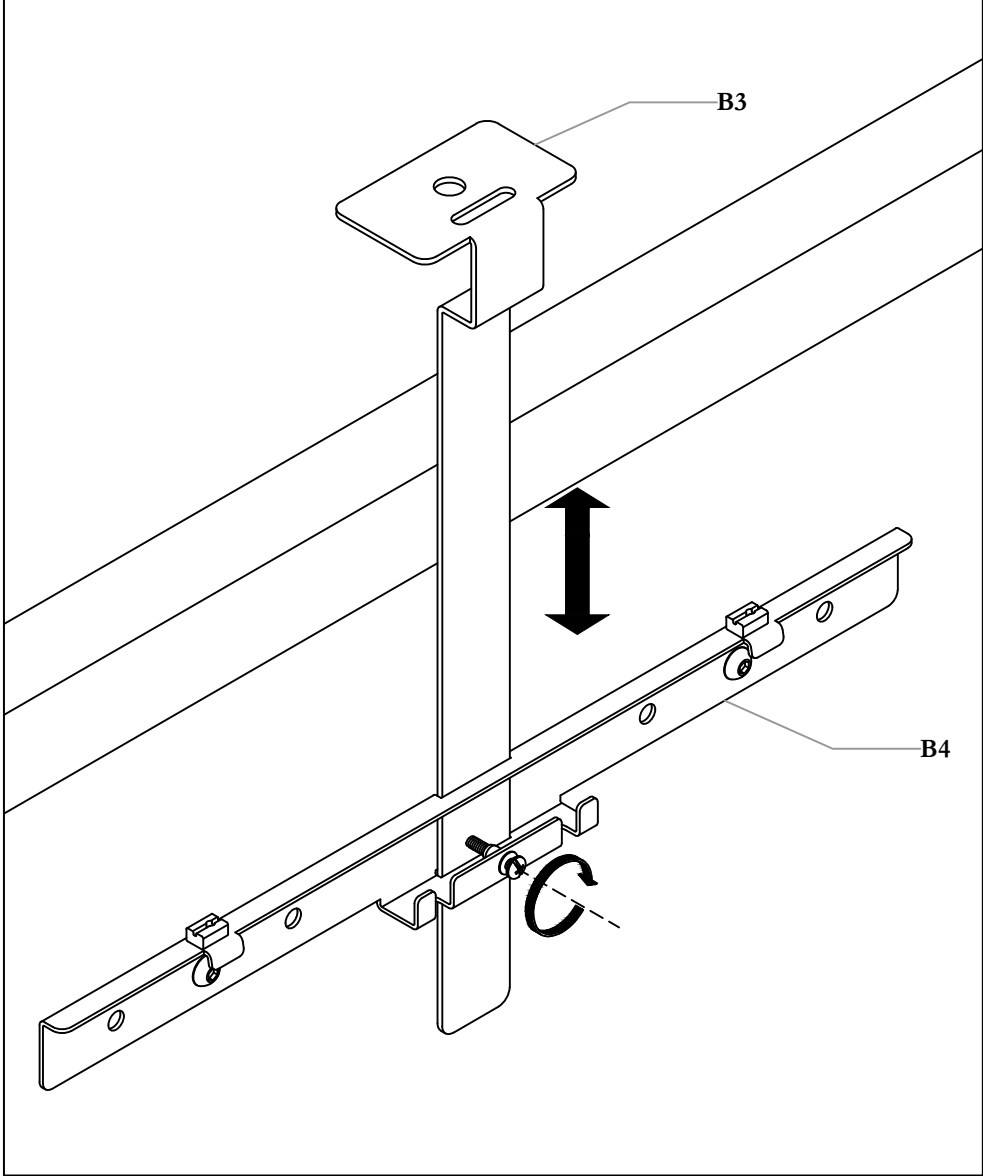

STEP 7b: Adjust the Webcam Mount to the desired height if necessary. Tighten the screw when the Webcam Mount is at desired height.

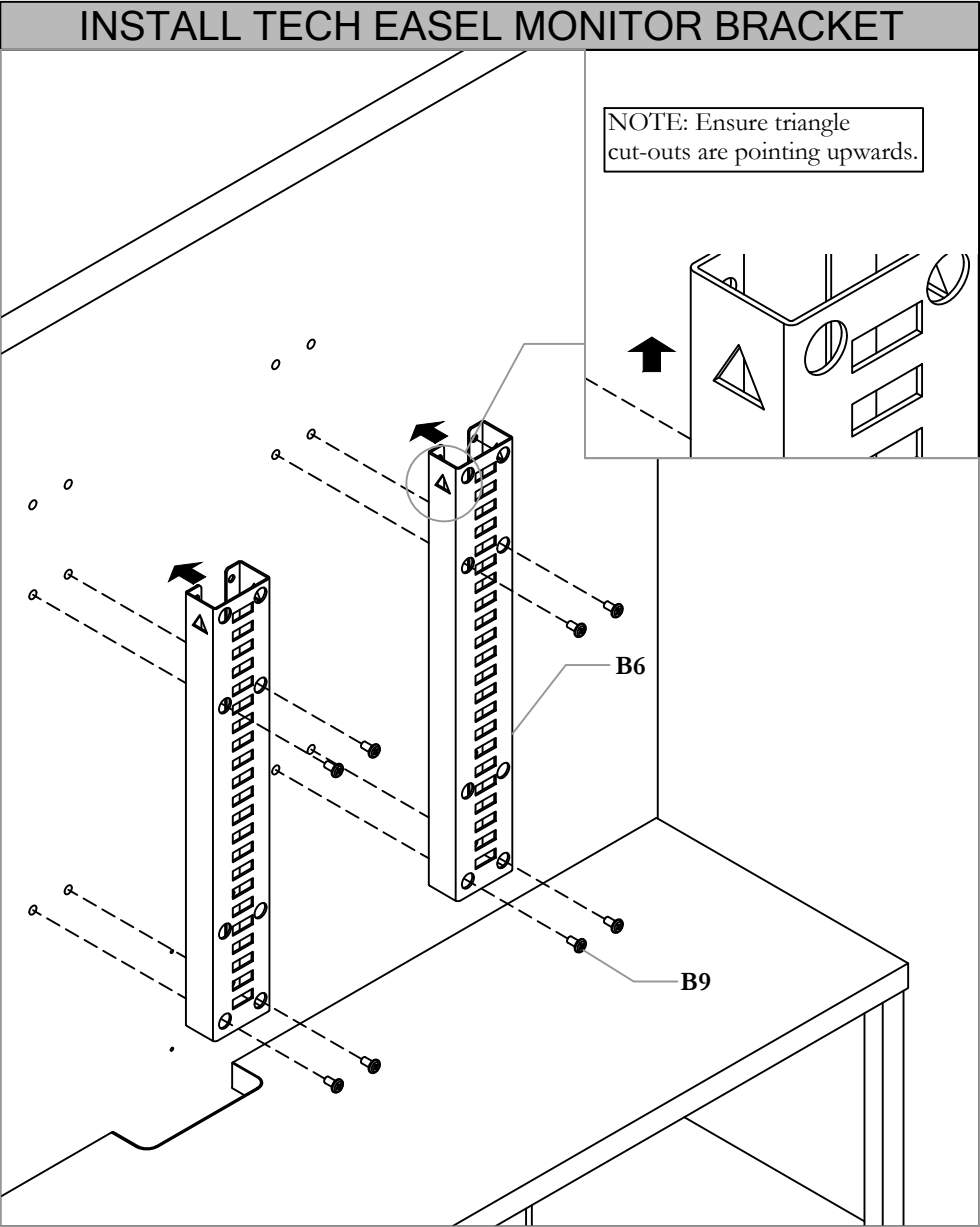


STEP 8a: Install Tech Easel Monitor Bracket. Use the pilot holes for placement. Make sure the orientation of the Brackets are correct by facing the cut-out triangles upward.

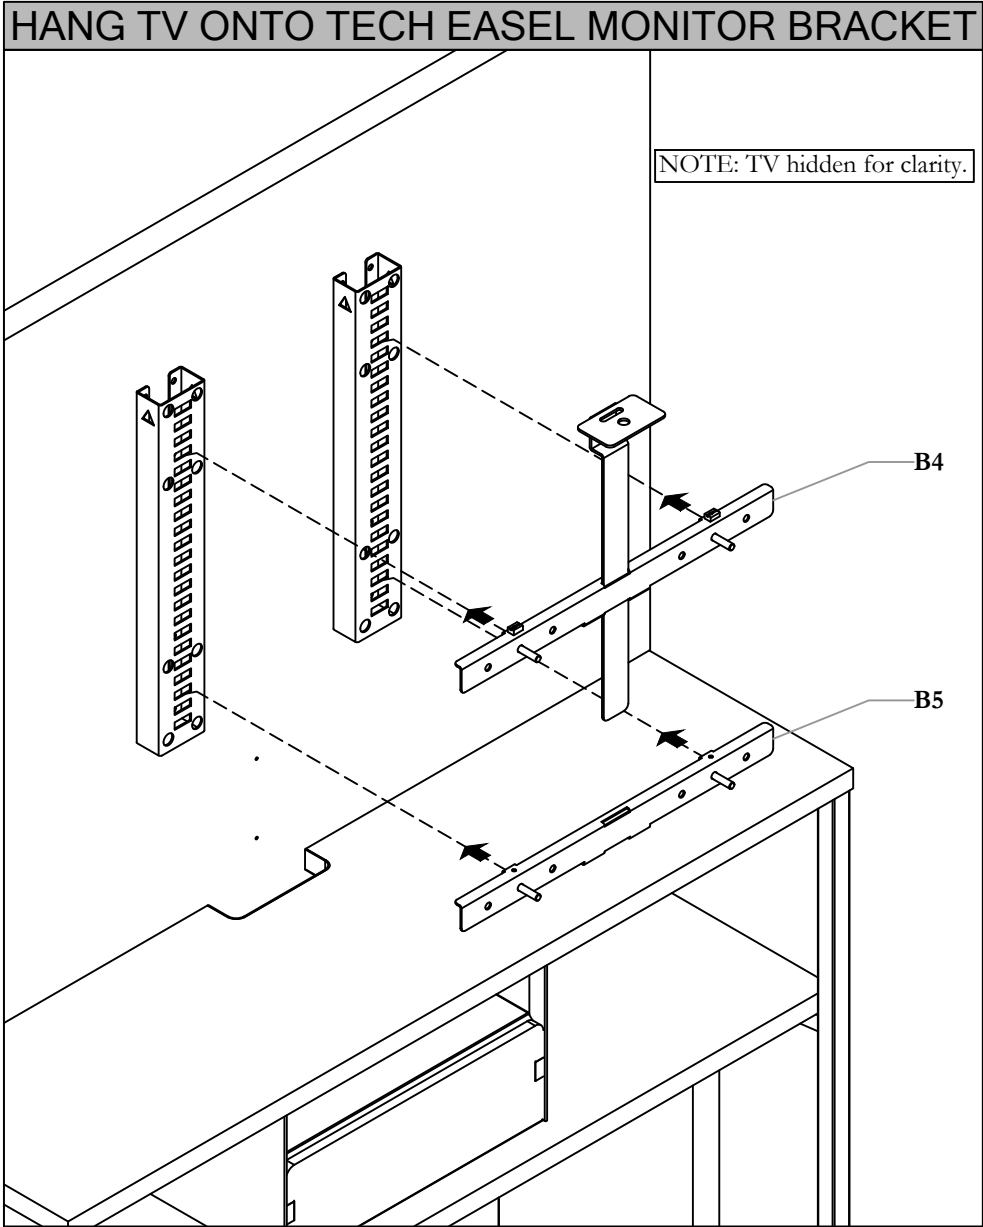

STEP 8b: Install TV onto Tech Easel Monitor Bracket.


NOTE: TV hidden for clarity.

TWO ADJUSTABLE TV MOUNT POSITIONS

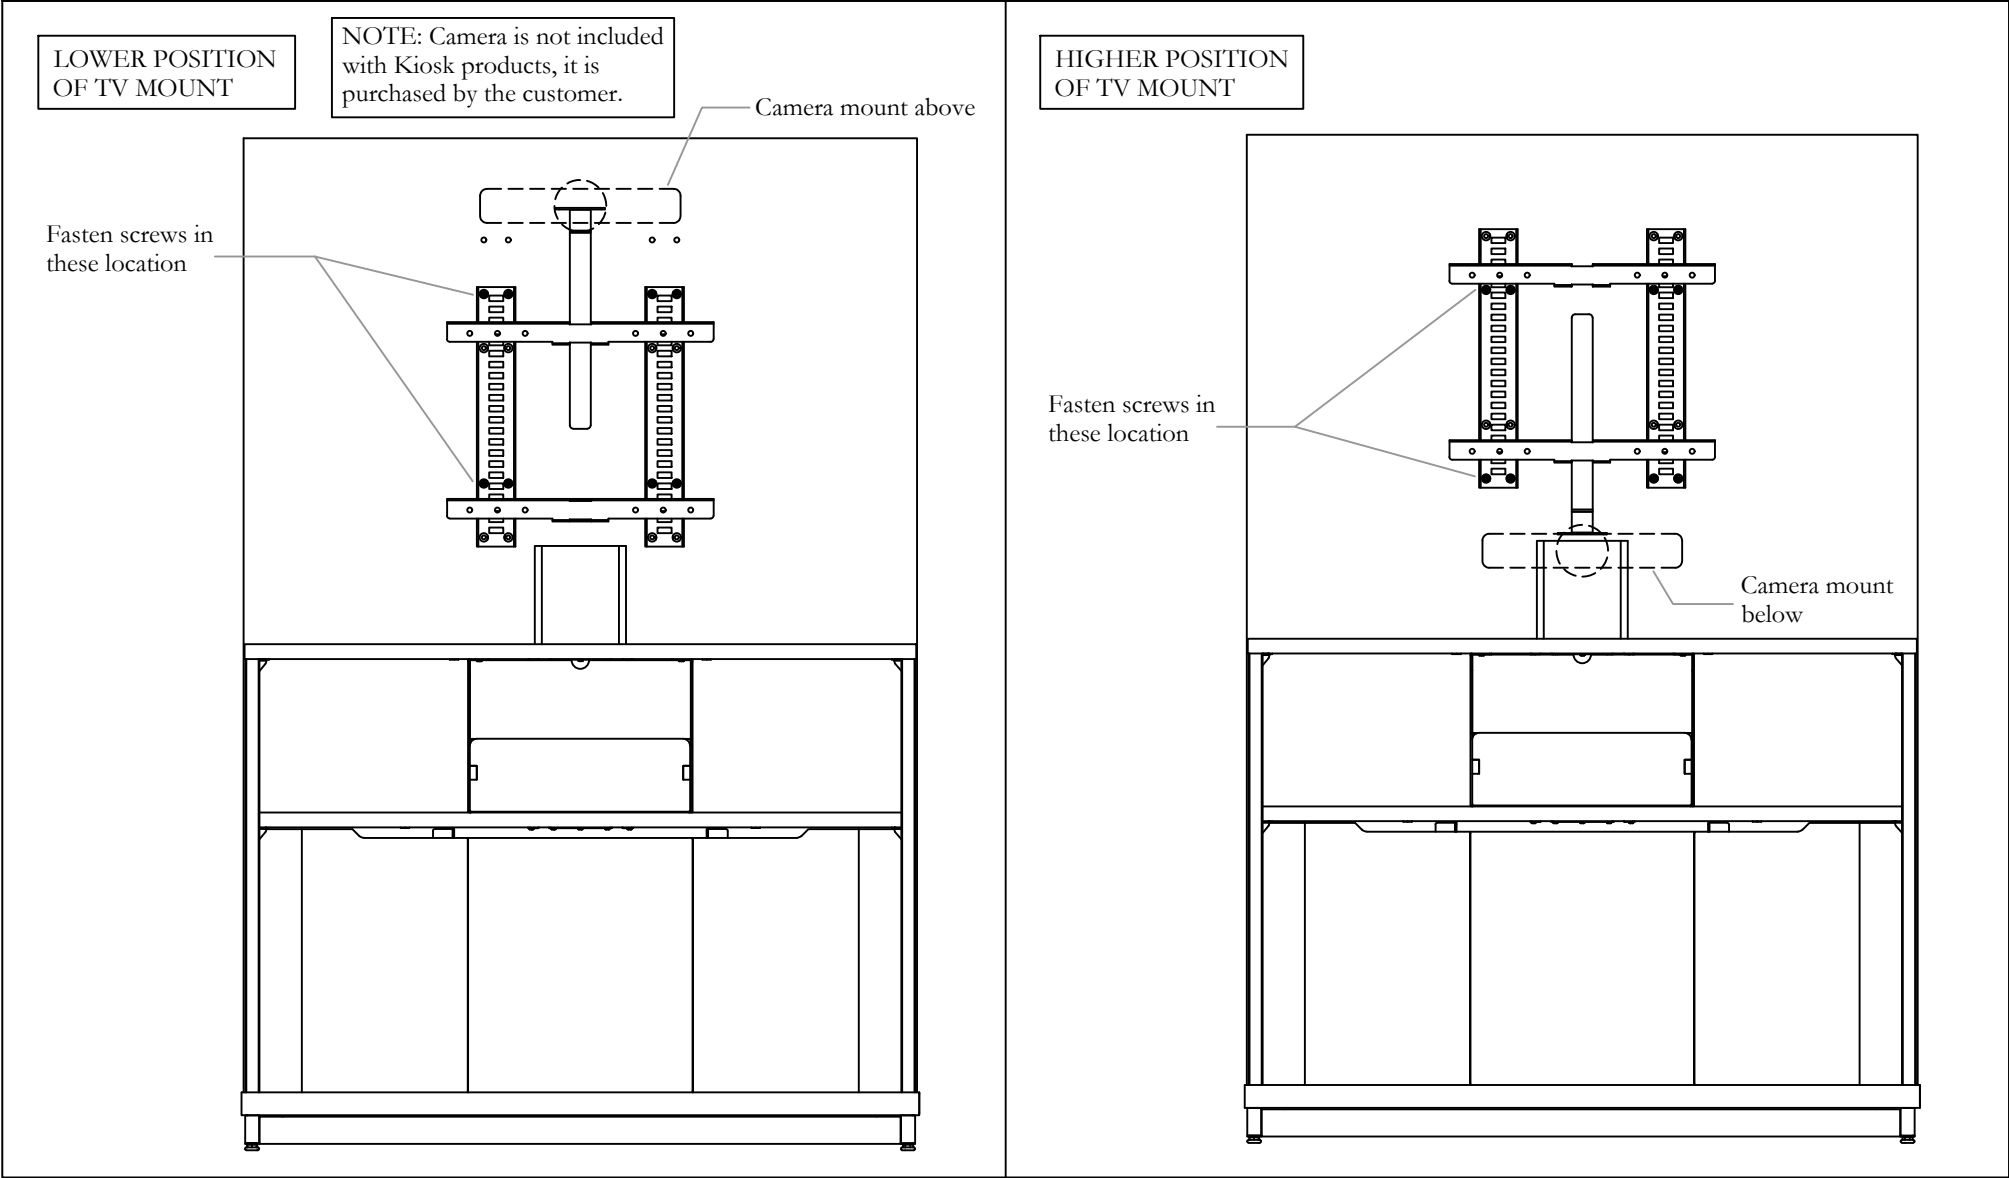


NOTE: The lower position of the TV mount allows the camera to be mounted above the TV (not shown). This orientation is optimal for environments where people are standing to ensure eye level is maintained with camera.

NOTE: The higher position of the TV mount allows the camera to be mounted below the TV (not shown). This orientation is optimal for seated height applications to ensure eye level is consistent with the camera.

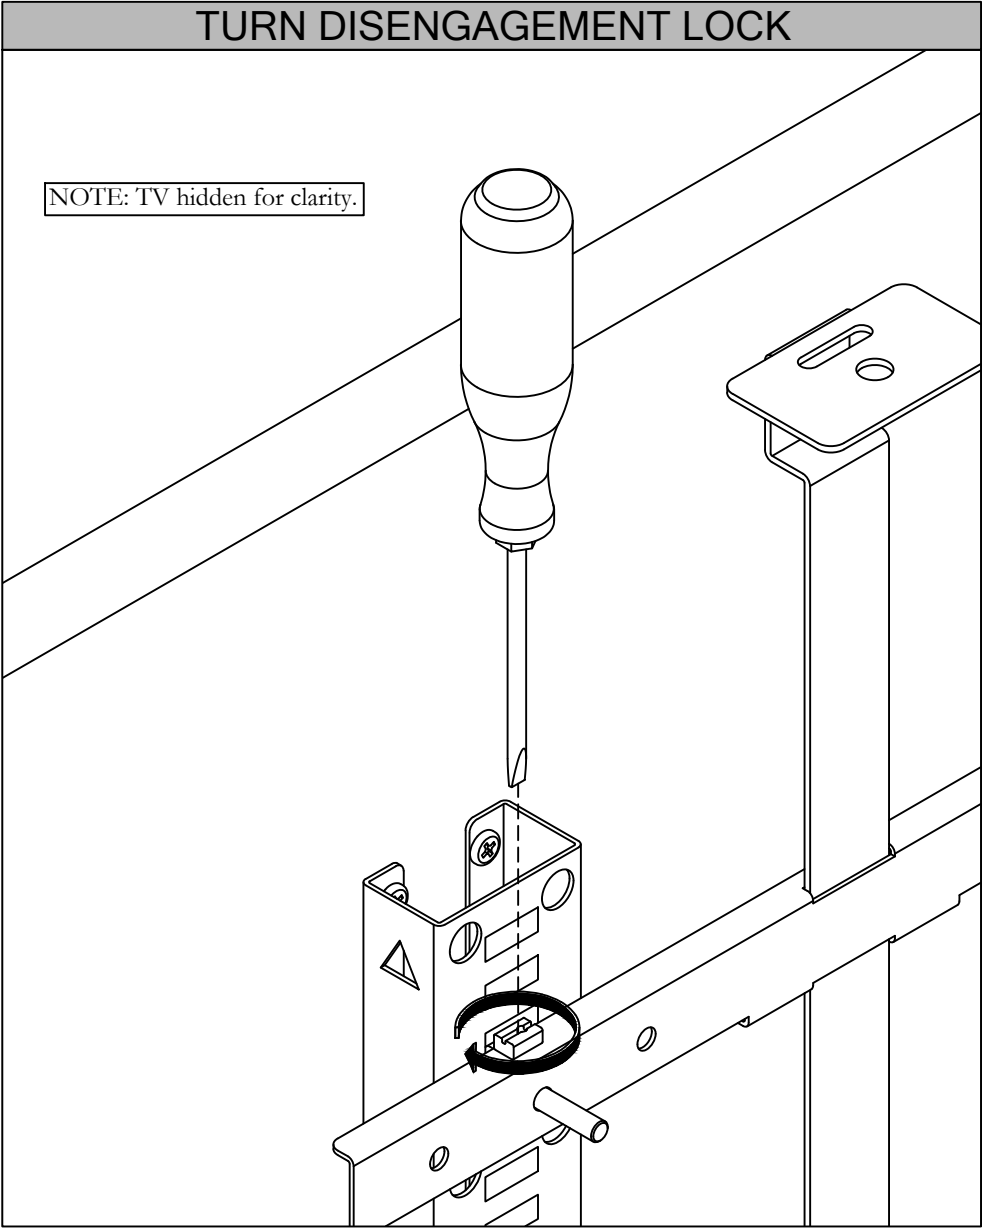

STEP 9: Turn disengagement lock on both sides to lock the Top Bracket into Place. This will prevent the TV from falling off..


NOTE: TV hidden for clarity.

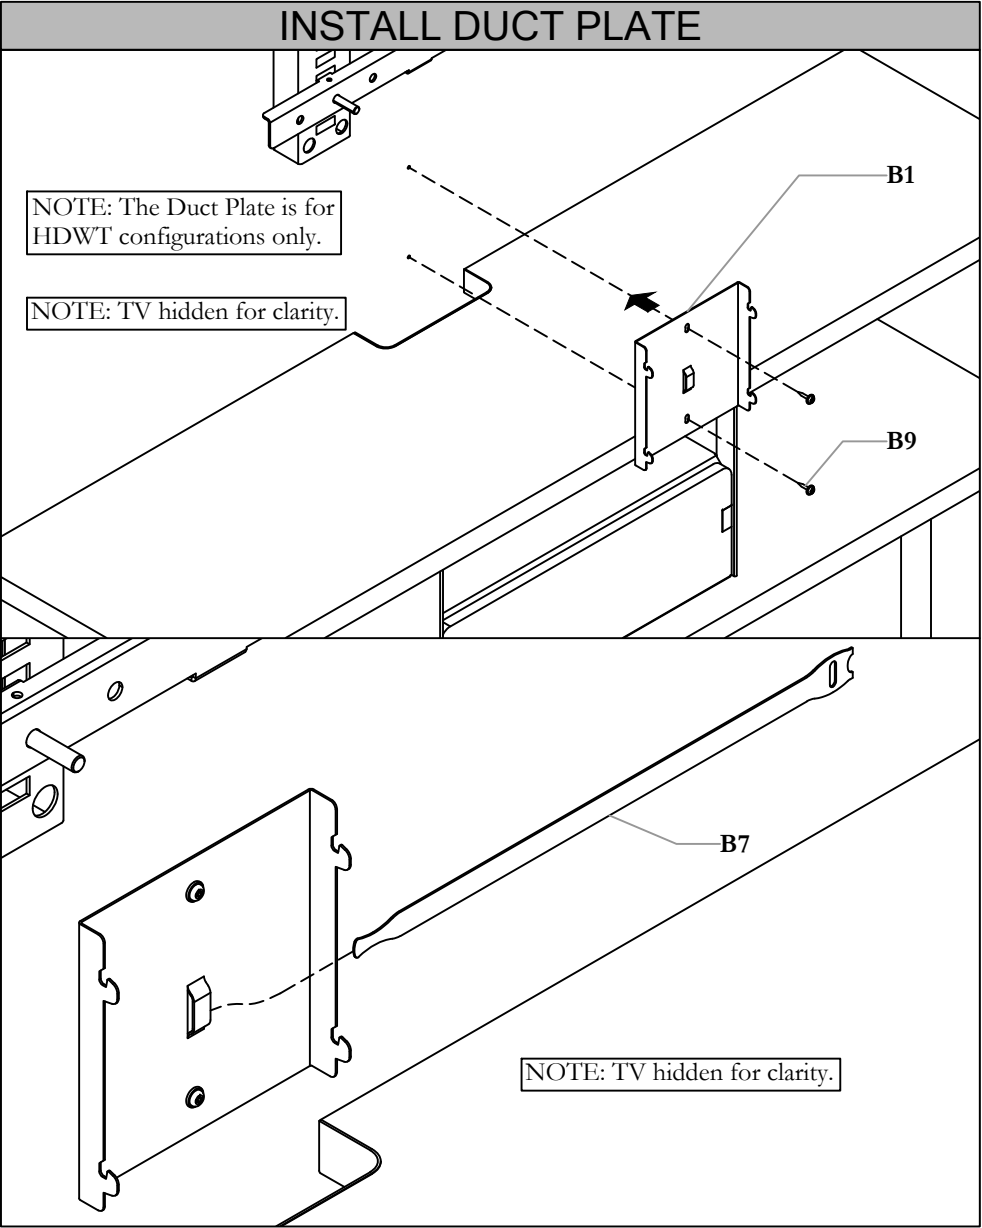

STEP 10: Install Duct Plate and place Velcro around the extruded section in the middle of the Duct Plate.


NOTE: TV hidden for clarity.

REMOVE BOTH P.E.T COVERS

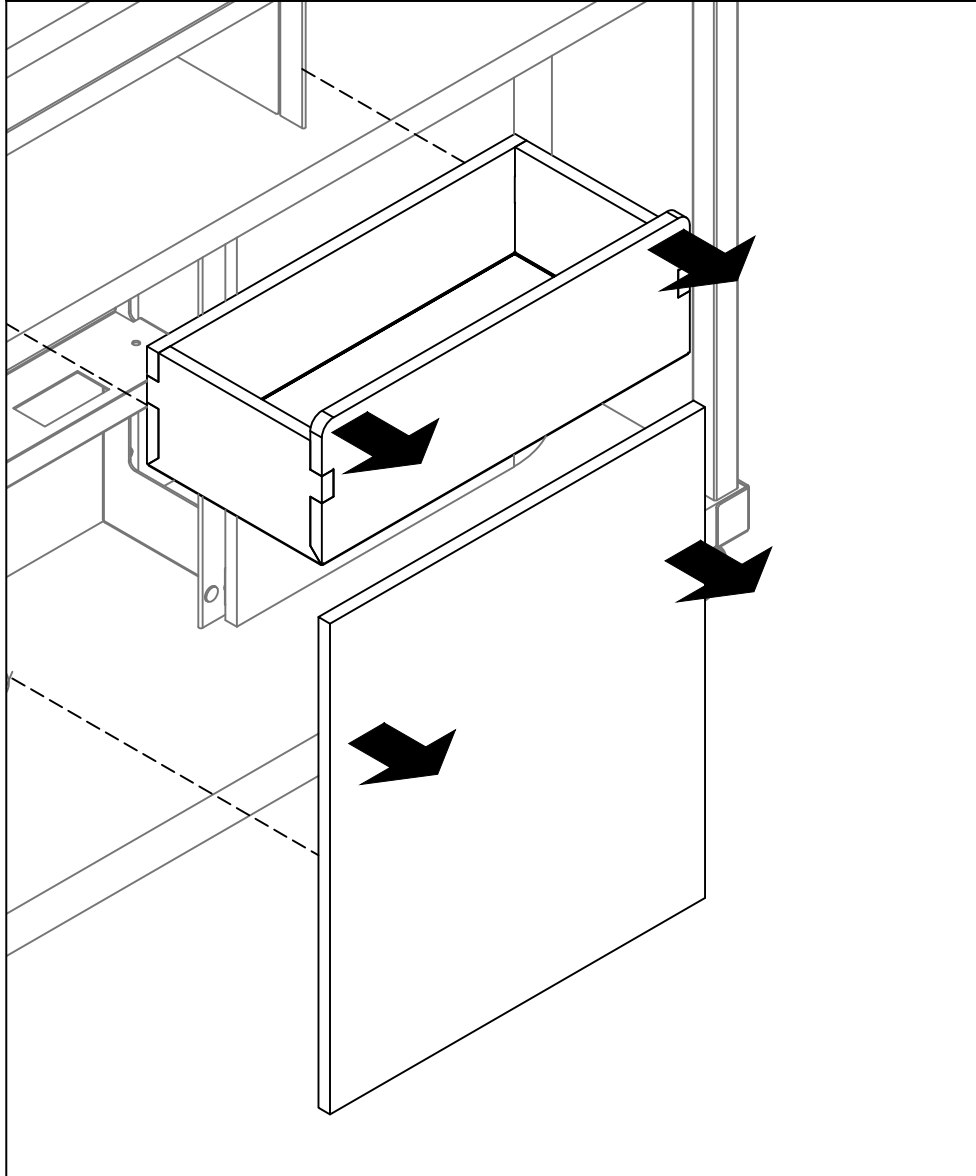


STEP 11: Remove both PET covers. The bottom one has metal brackets on its top to pull from.


ROUTE THE TV WIRING

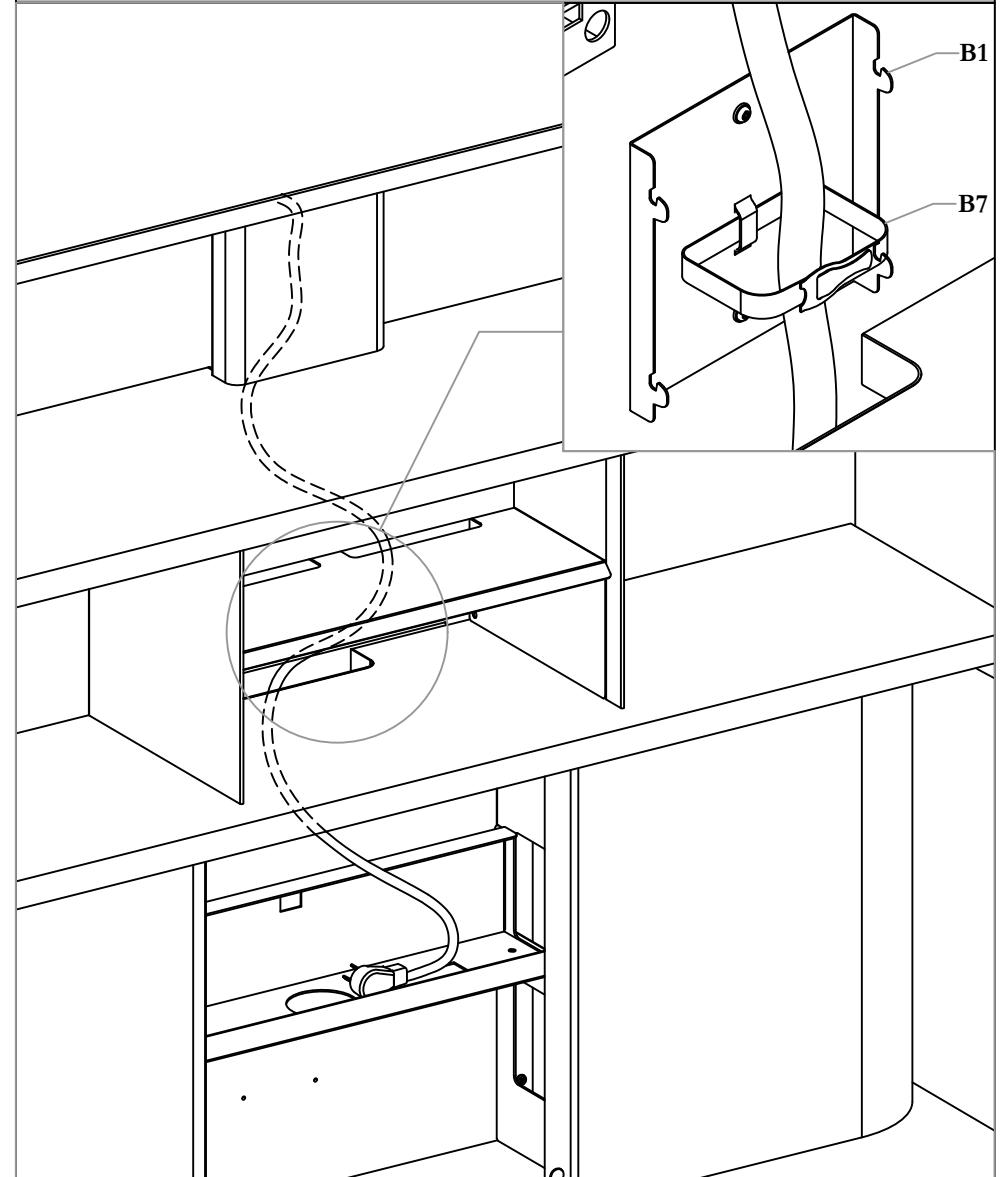

STEP 12a: Slide the wiring through the Duct Plate and through the gaps that lead into the bottom. Use additional velcro strips if necessary.

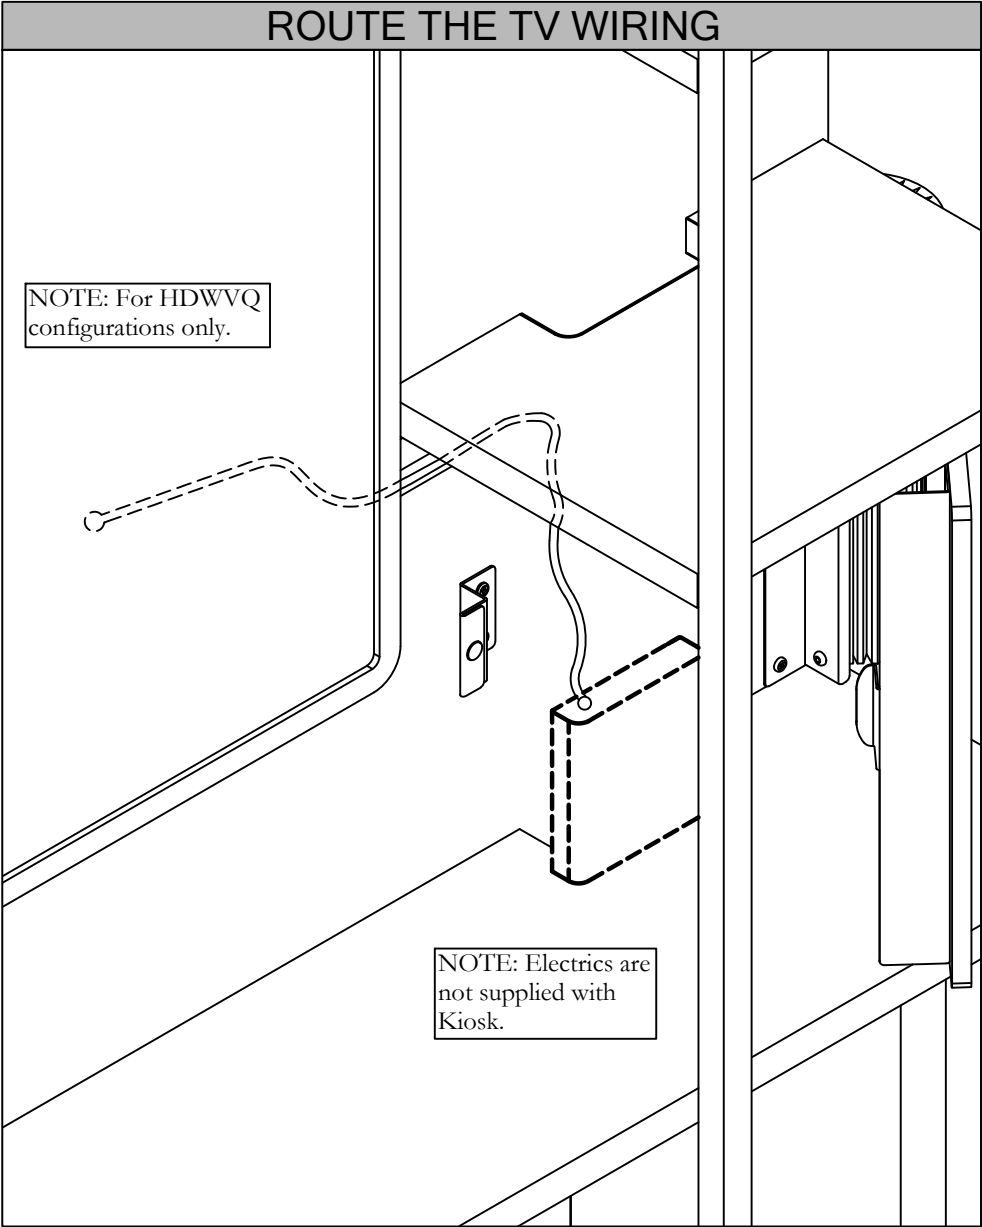


STEP 12b: For the Media Chat Kiosk (HDWVQ) the wire will be routed through the plastic u-channel manager, which is mounted behind the tv, travels underneath the shelf and behind the felt hinged door. The PET cover shown is closed magnetically. It can be opened by pulling on the edge with sufficient force. NOTE: For HDWVQ configuration only.

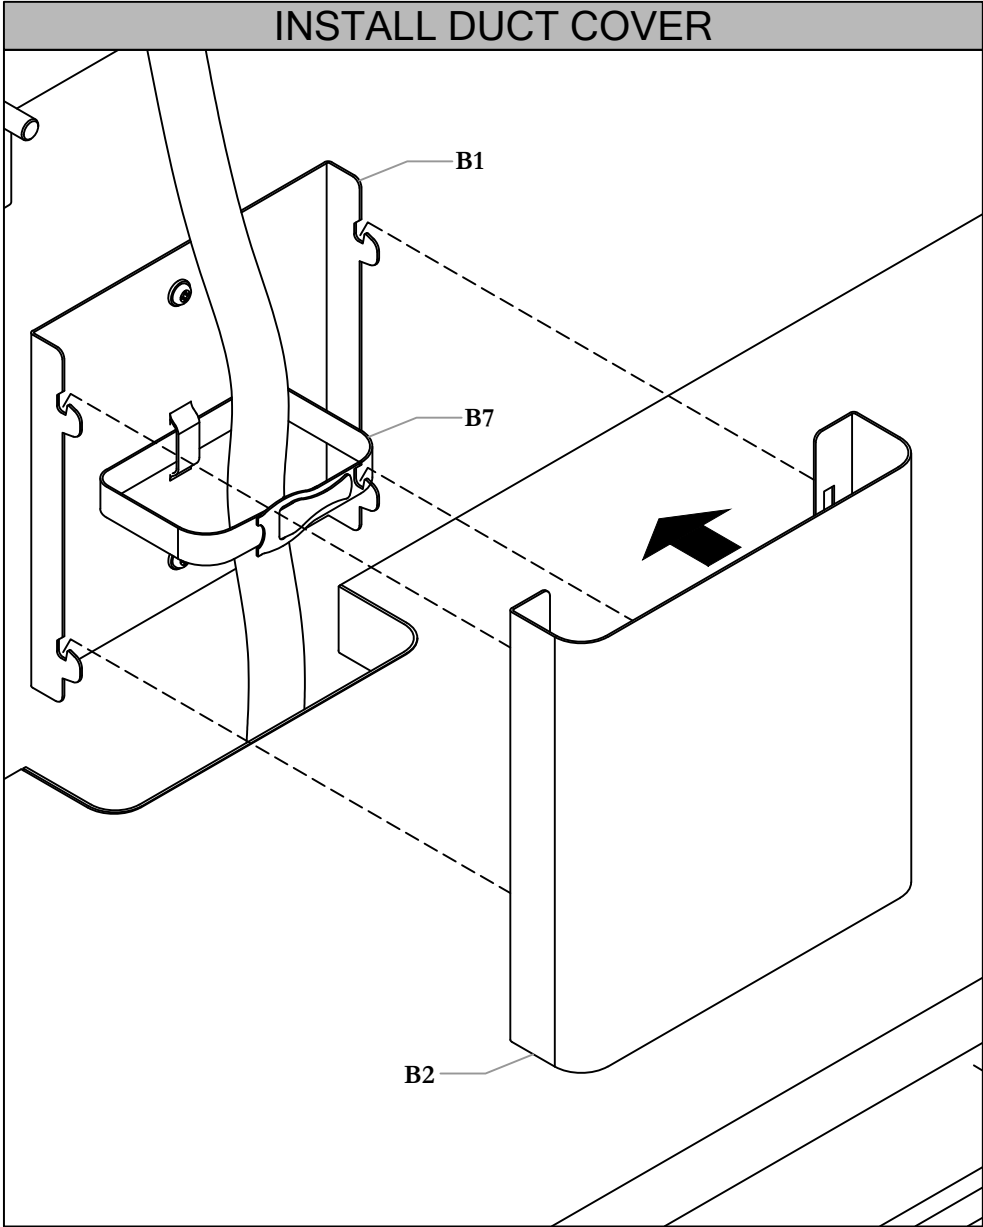

STEP 13: Hang the Duct Cover onto the Duct Plate.


NOTE: TV hidden for clarity.

PUSH IN THE MOUNTING HANGARS

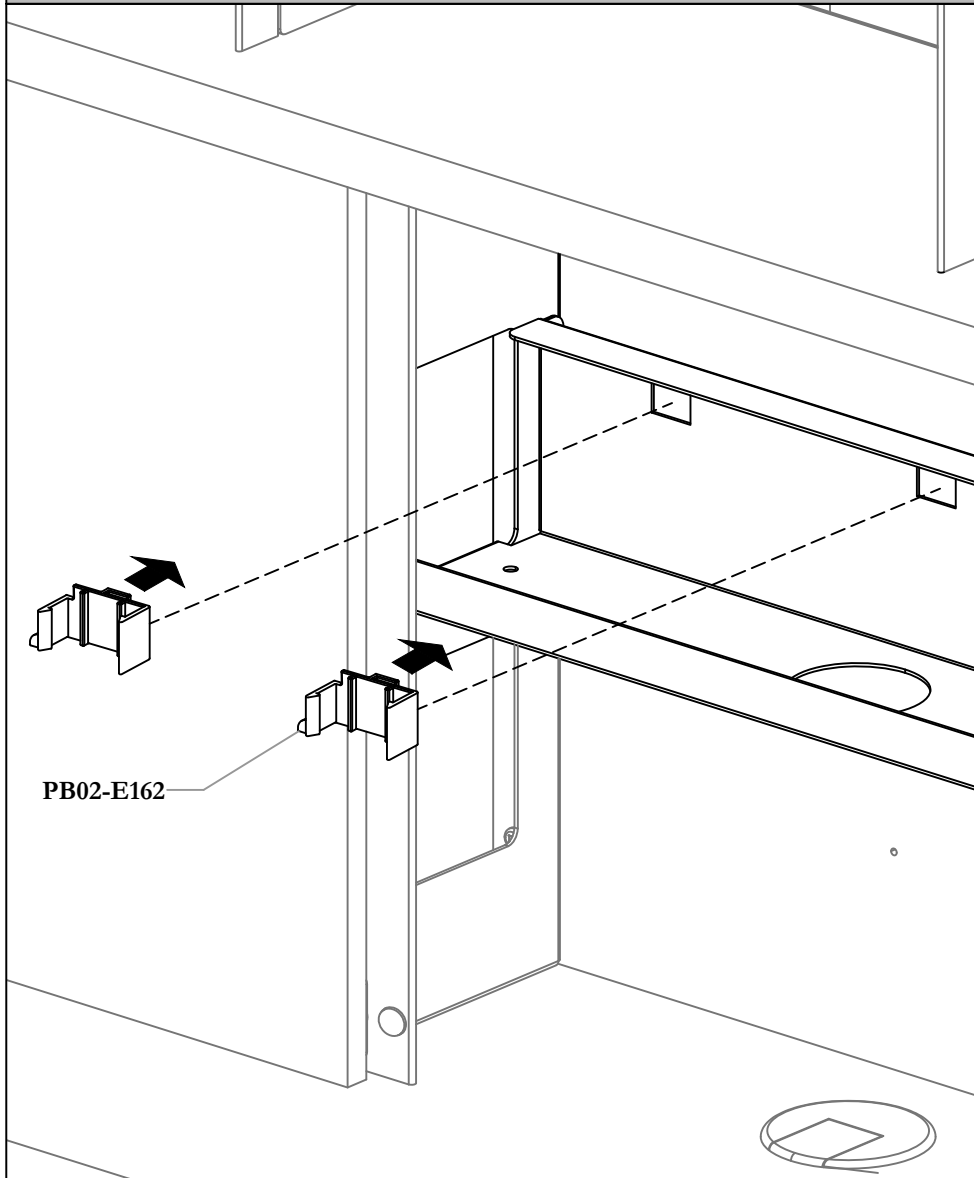


STEP 14a: Push in the Mounting Hangars into the gaps provided.

TWIST THE MOUNTING HANGARS

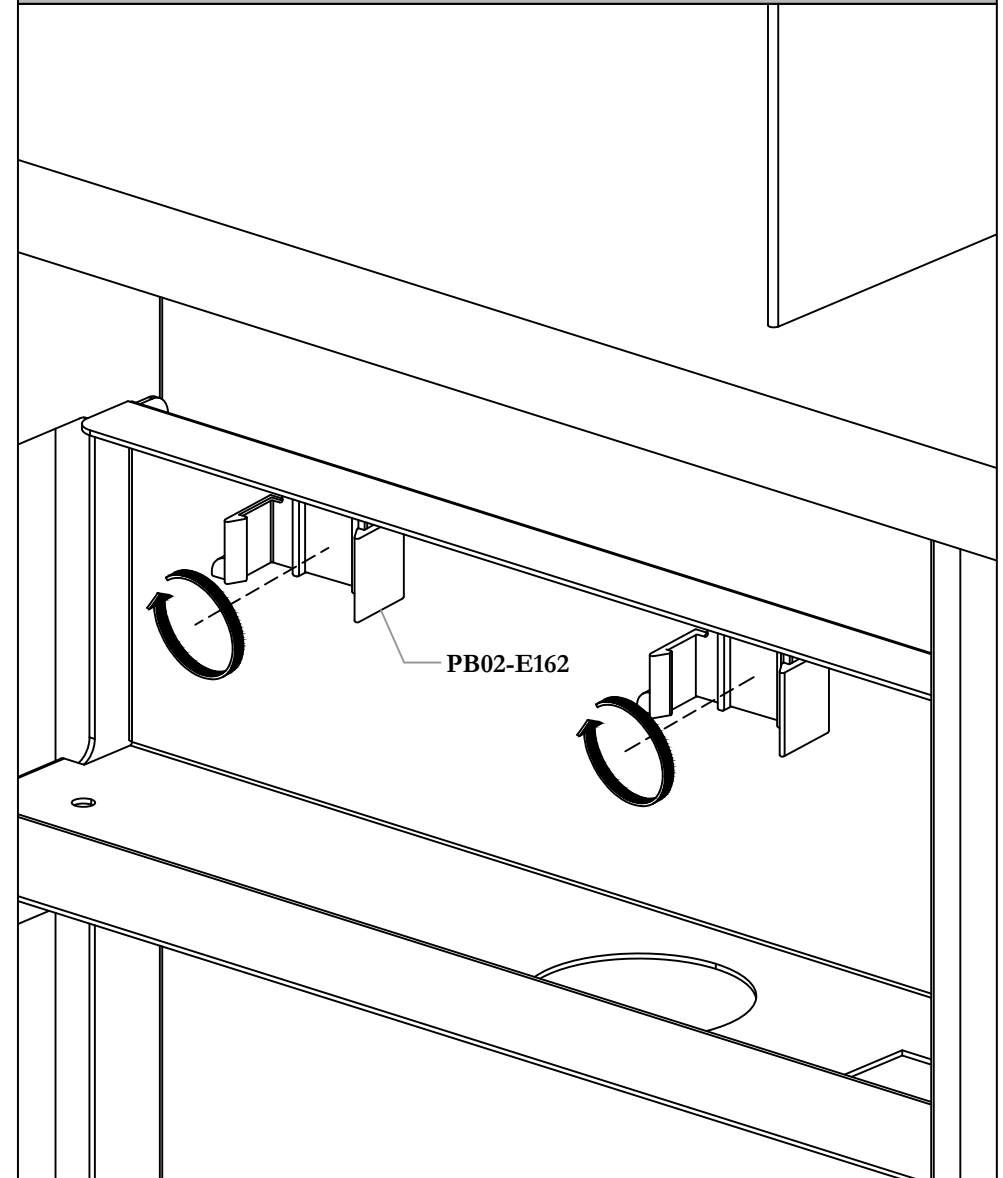


STEP 14b: Twist the Mounting Hangars clockwise 90 degrees so that they rest on the bracket.

INSTALL POWER BAR

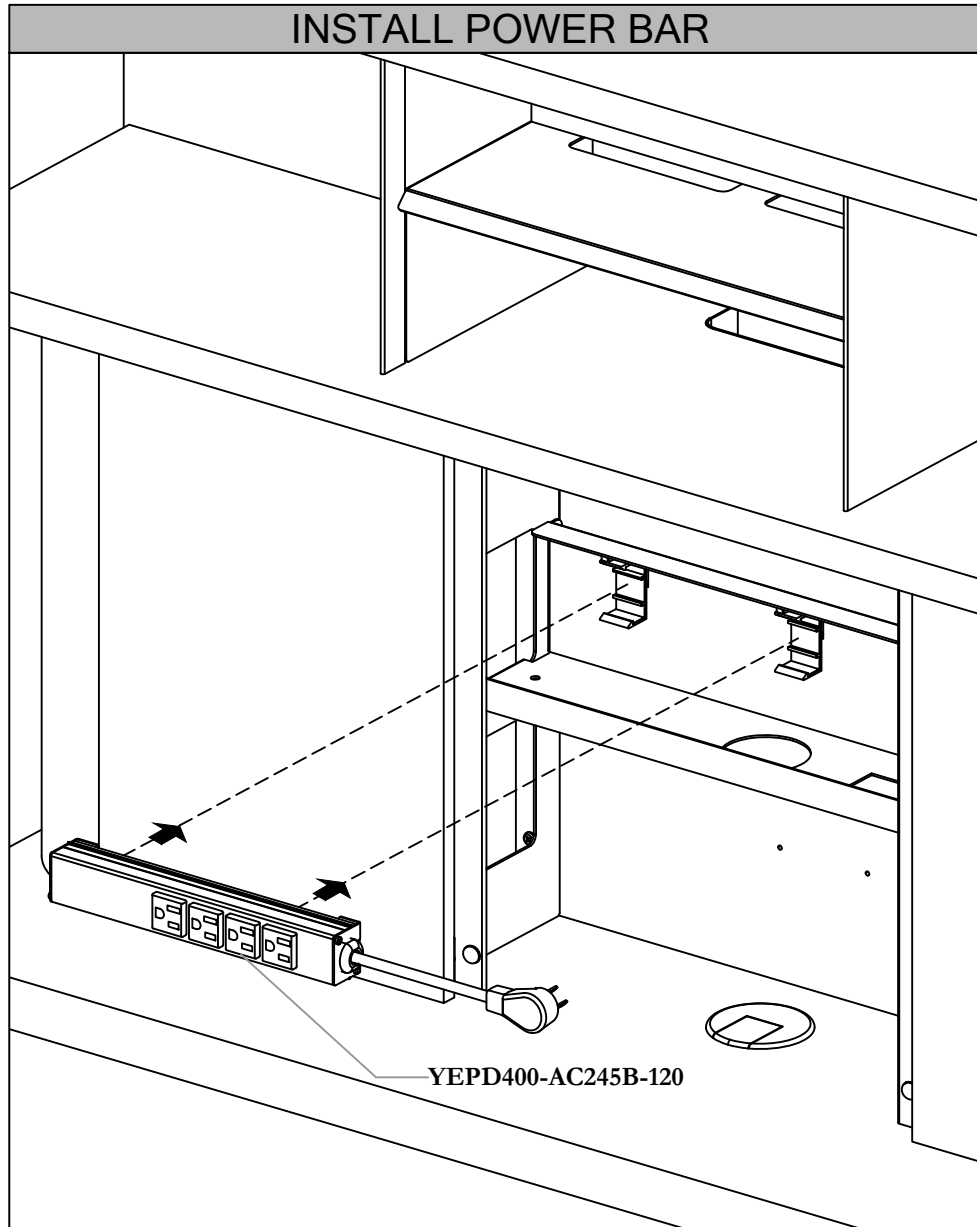

STEP 15: Snap the Power Bar onto the the Mounting Hangars.

ROUTE THE WIRING FOR THE POWER BAR

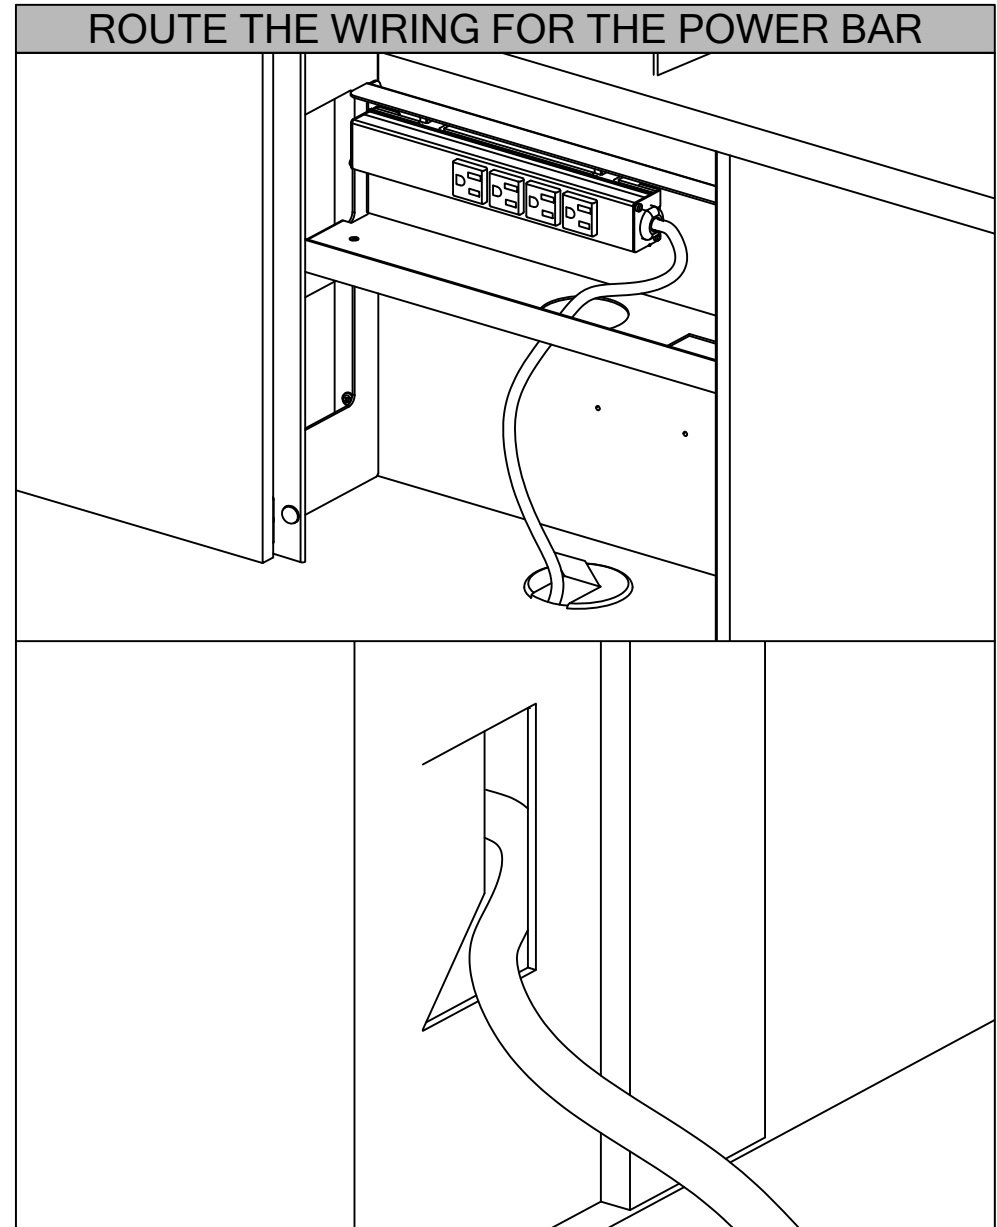

STEP 16: Route the wiring through the bottom grommet or through one of the side cutouts as shown. Use the remaining Velcro strips to manage the wiring for the power bar and TV.