



Desk Edge Screen - Glass (UNSDEG)
Desk Edge Screen -Full Height Glass (UNSFDDG)

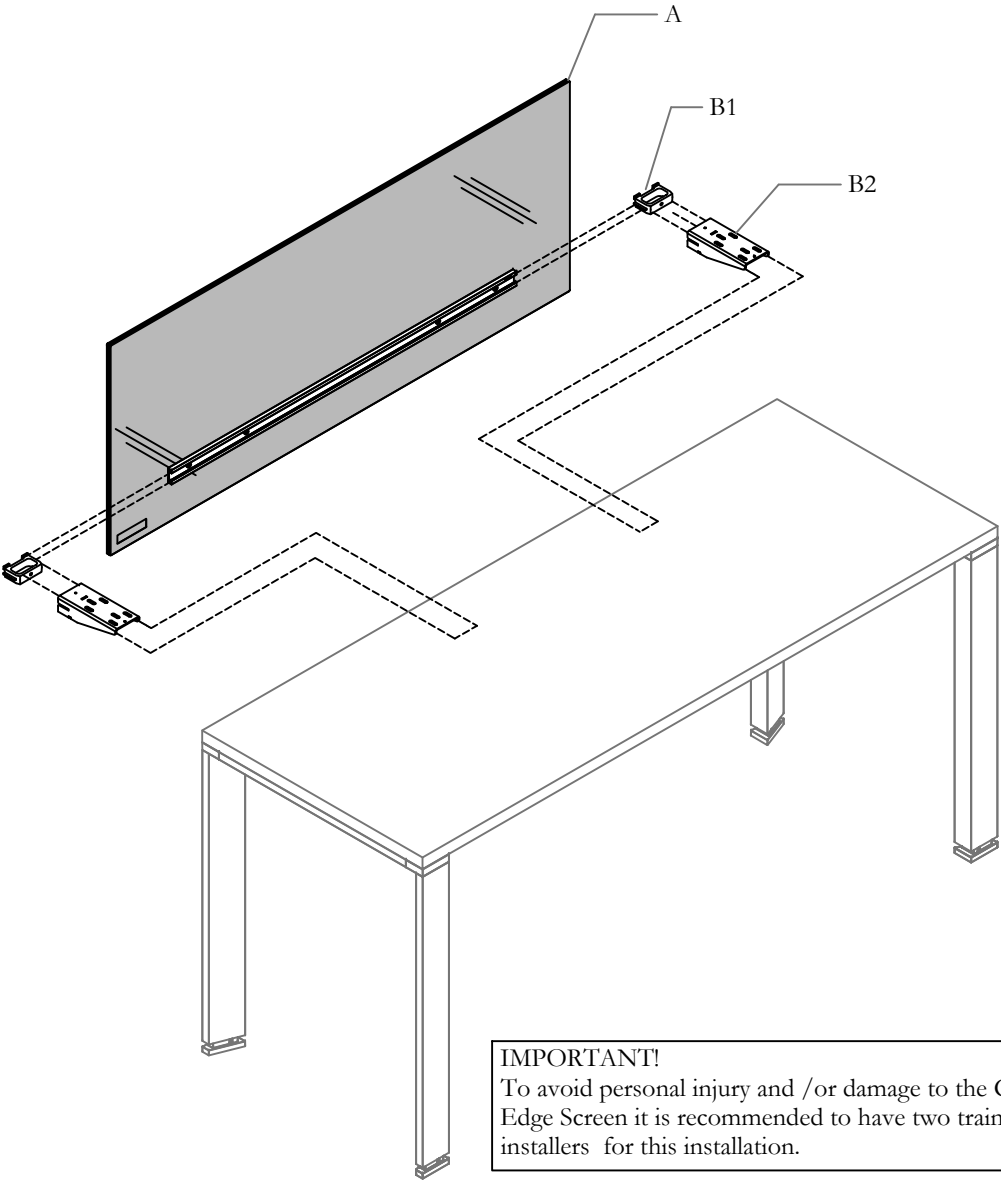


IMPORTANT!
To avoid personal injury and /or damage to the Glass Edge Screen it is recommended to have two trained installers for this installation.

Part and Product Identification

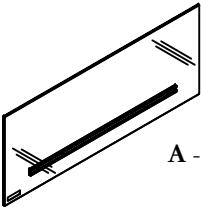

A - Desk Edge Screen 10mm
Tempered Glass Panel Assembly
(N09-2752-X) x1 (UNSDEG)

OR

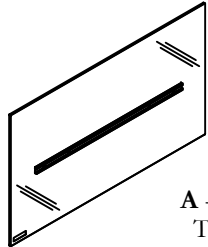

A -Full Height Desk Edge Screen
Tempered Glass Panel Assembly
(N09-2961-X) x1 (UNSFDDG)


	(N09-2672) x 2 or 4	B1 - Desk Edge Screen Clamp (A25-0316) x1
		B2 - Desk Edge Screen Bracket Weldment (N09-2662) x1
		B3 - 1/4 - 20 X 1" Machine Screw (E01-0588) x1
		B4 - #10 X 0.875" Screw, Quad, Pan Washer (E07-0077) x6


Section: **SCREENS**

Description: **DESK EDGE SCREEN AND FULL HEIGHT SCREEN (GLASS) INSTALLATION**

NOTE

NOTE: If two brackets are there follow this.

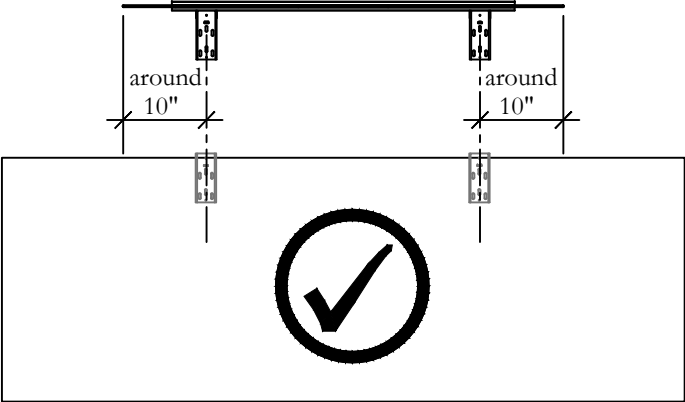


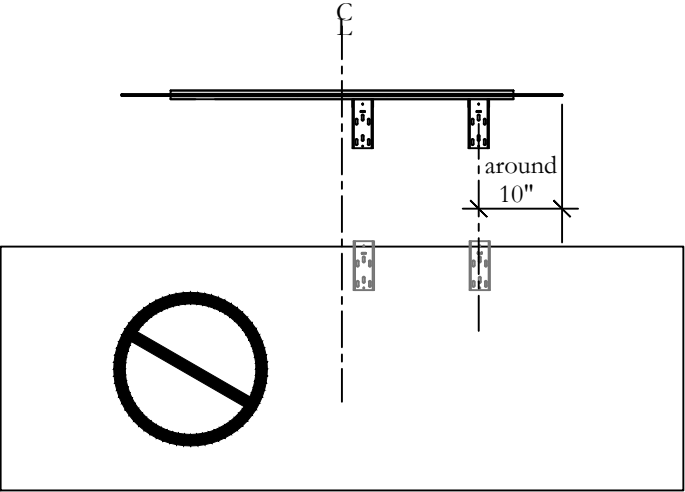


NOTE: Brackets should be placed +/- 10" in from the edge of the **GLASS**.
If there is storage under the worksurface, adjust the location of the bracket as long as it doesn't pass the midpoint of the Glass.

NOTE

NOTE: If four brackets are there follow this.

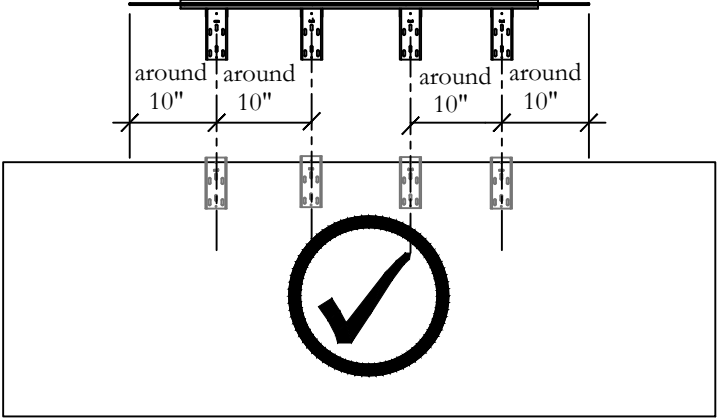

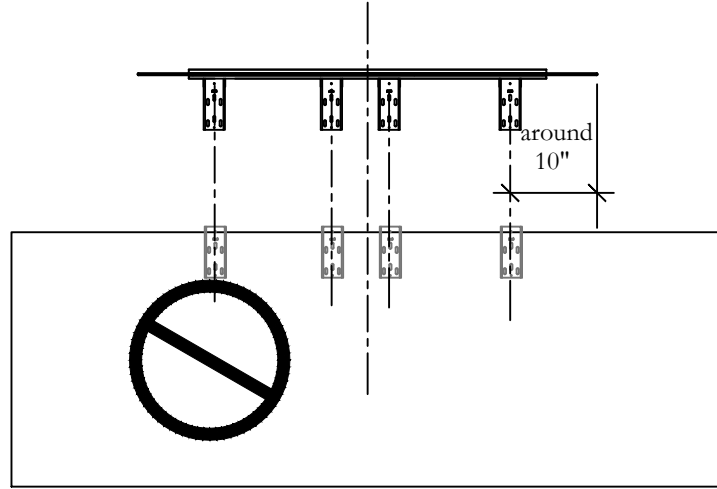


NOTE: Brackets should be placed +/- 10" in from the edge of the **GLASS**.
If there is storage under the worksurface, adjust the location of the bracket as long as it doesn't pass the midpoint of the Glass.

Section: **SCREENS**

Description: **DESK EDGE SCREEN AND FULL HEIGHT SCREEN (GLASS)**


Date: May 2024 Page No: 3 of 5
DIS_302

POSITIN BRACKETS

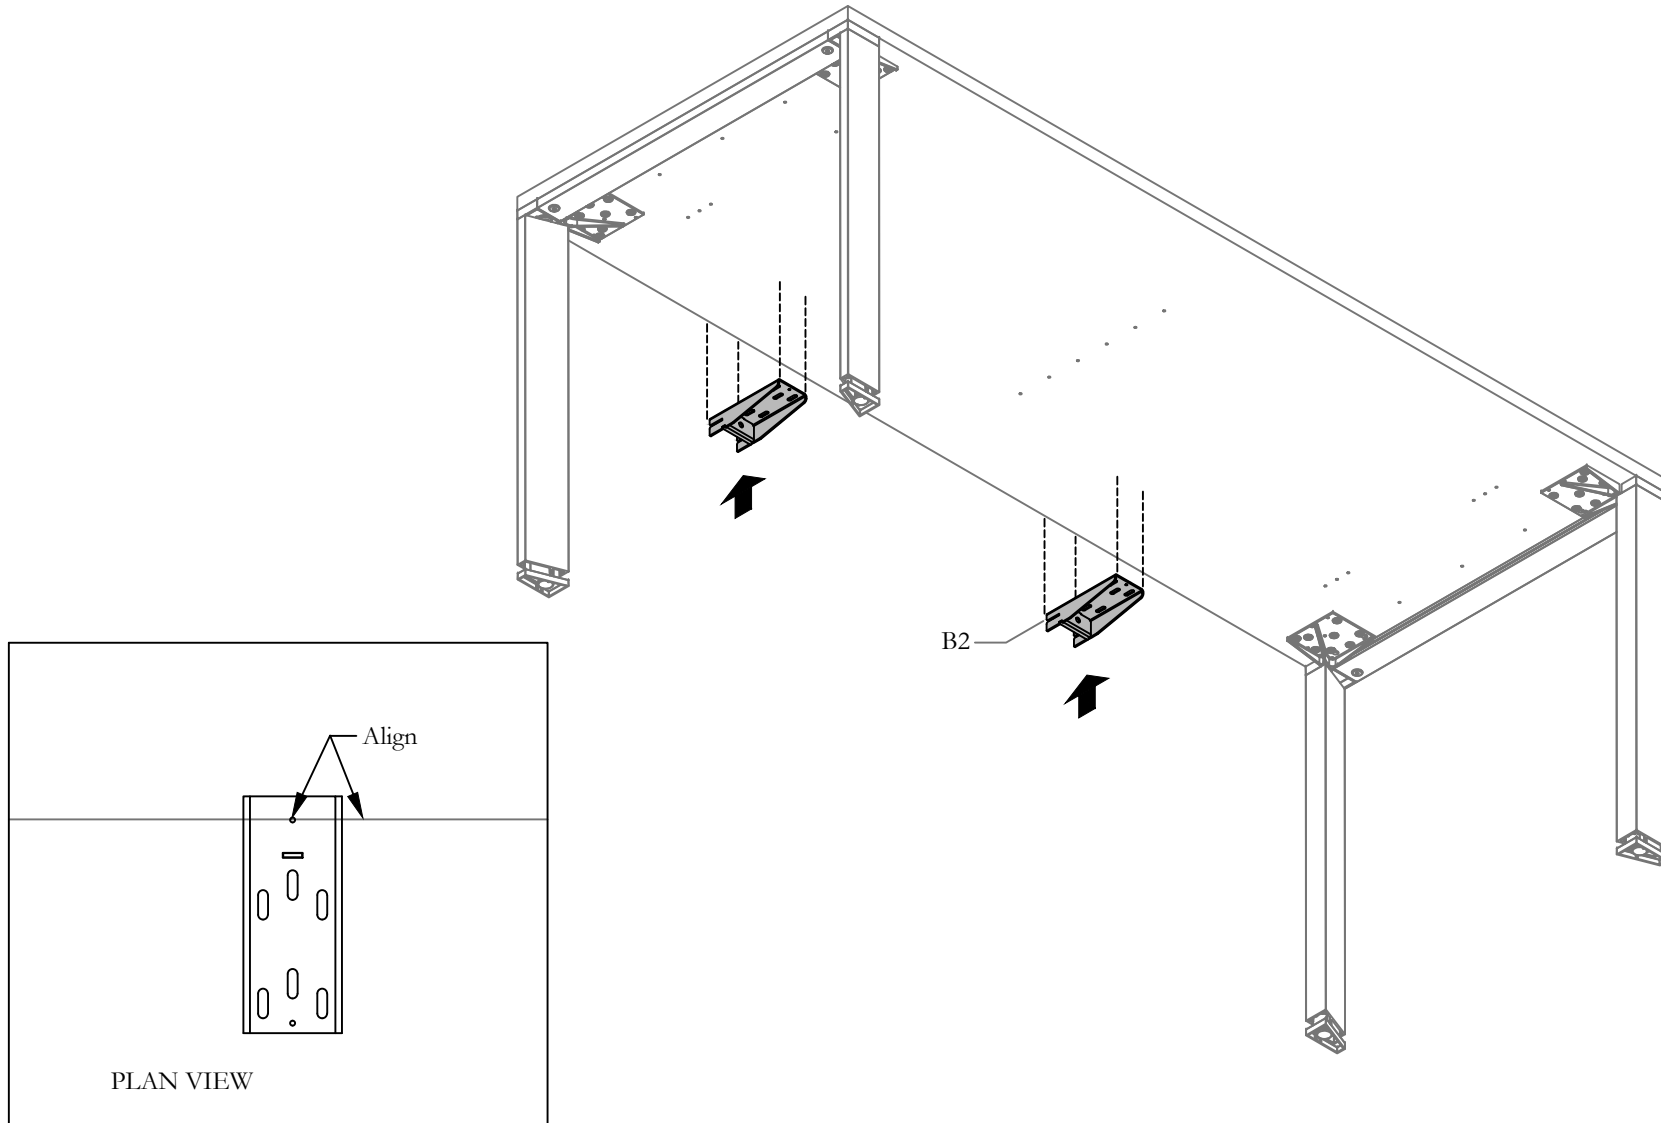




STEP 1: Position Bracket so the hole on the top surface of the Bracket is aligned with the edge of the Worksurface (see above).
IMPORTANT! The Brackets must be **PERPENDICULAR** to the Worksurface edge.

FASTEN BRACKETS

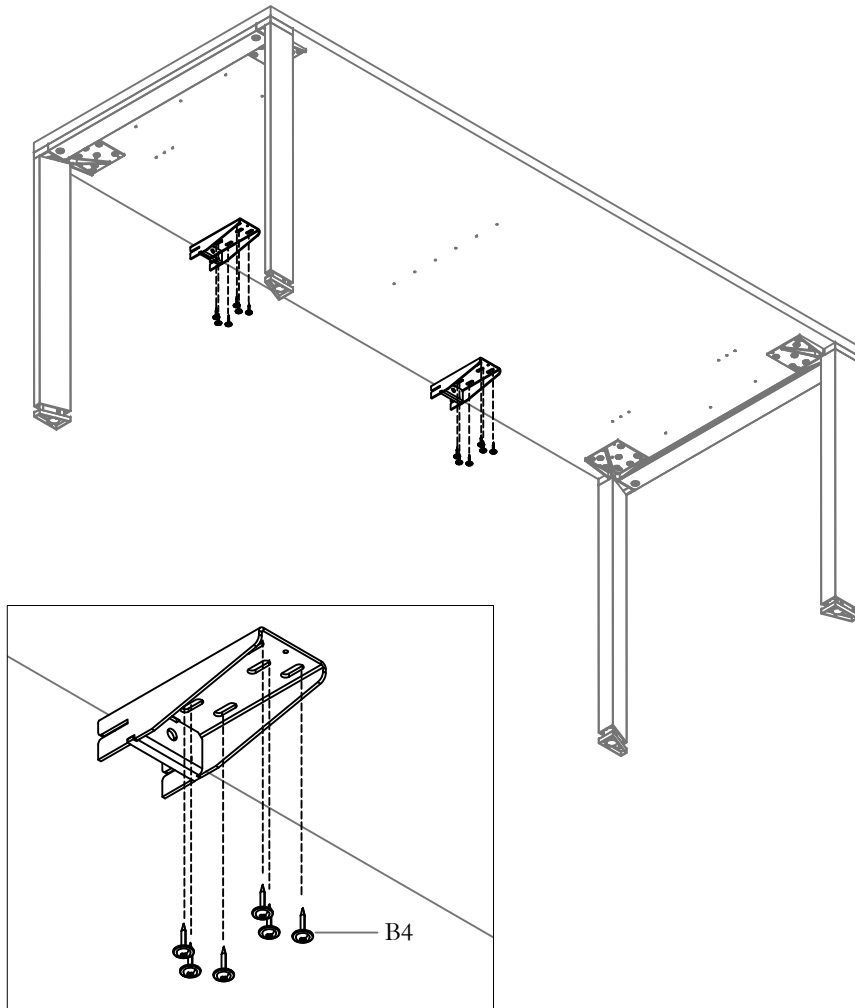


STEP 2: Fasten Bracket Weldments to underside of Worksurface with pan washer screws provided.

INSTALLING SCREEN CLAMPS

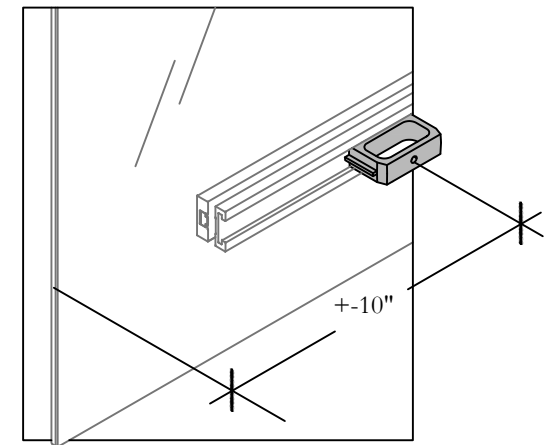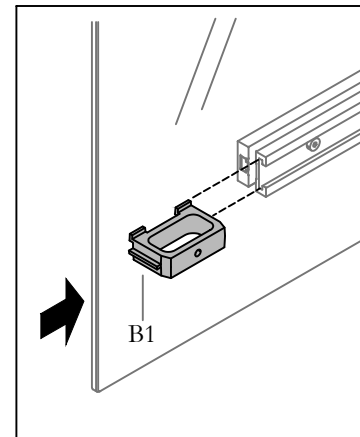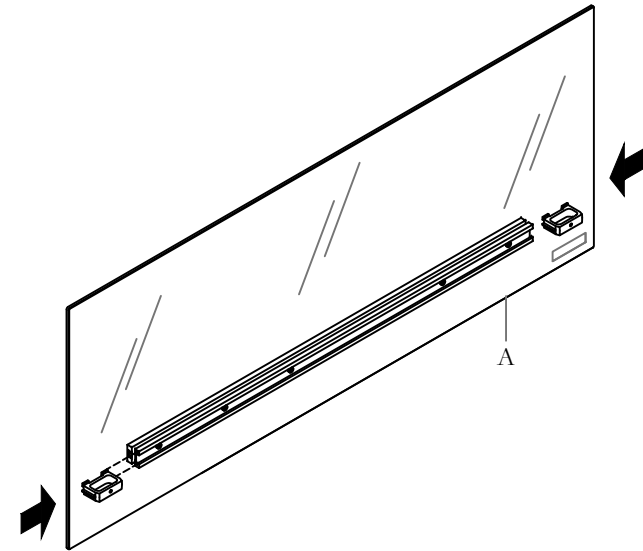


Step 3: At each end of the metal extrusion slide in the two Screen Clamps. Position the Clamps so that they are aligned with the brackets underneath the worksurface.

ENGAGE SCREEN INTO BRACKETS

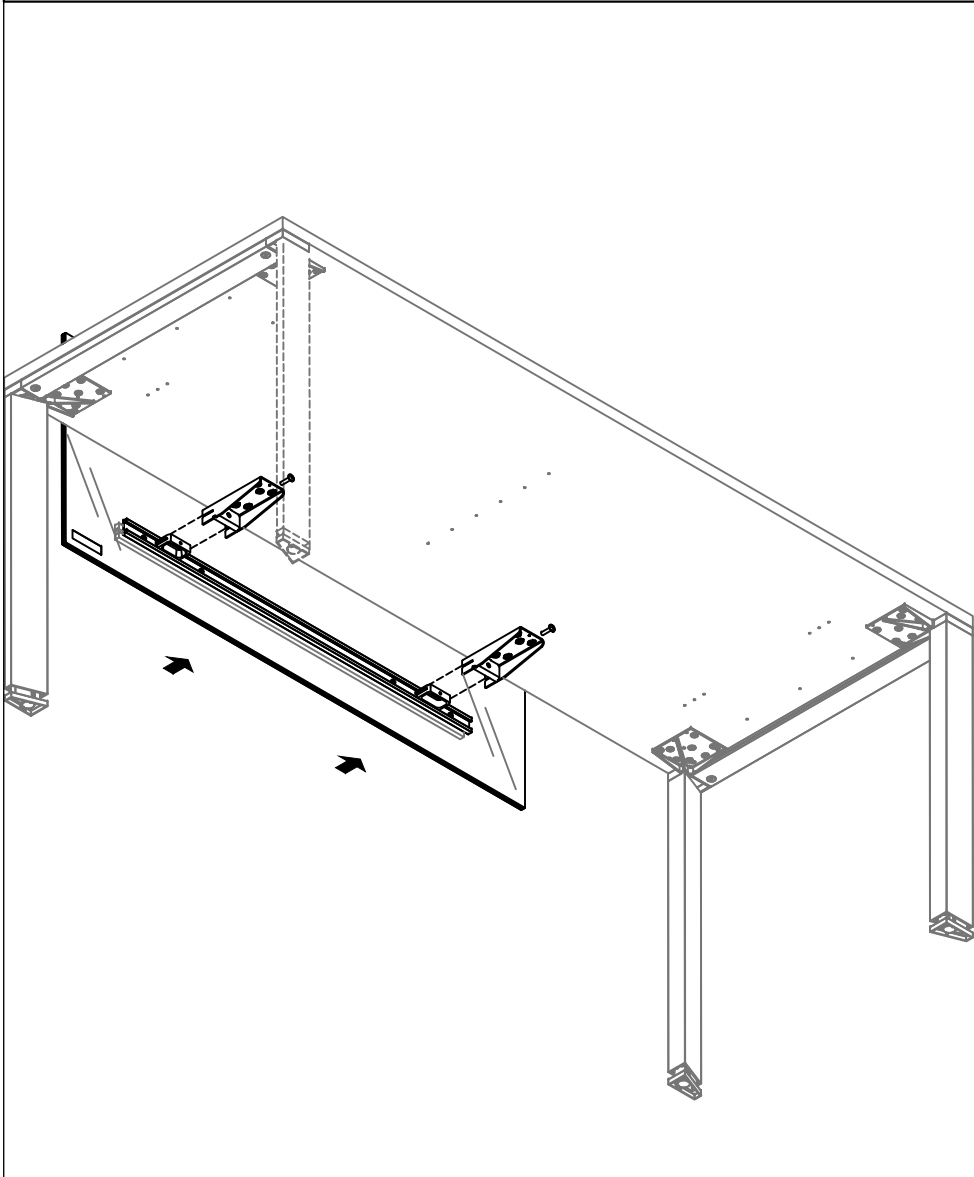

DETAILS

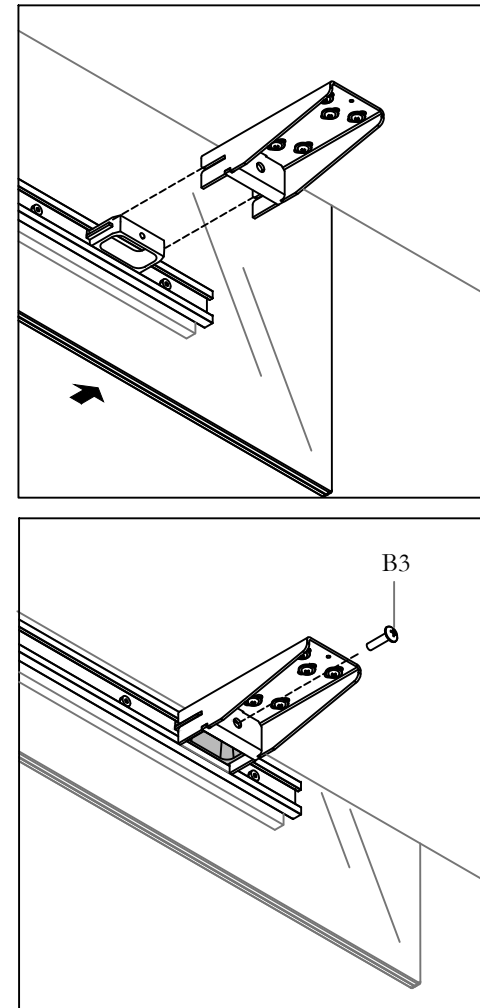

STEP 4: To install Screen on edge of worksurface insert Screen Clamps inside Weldment Brackets. One person should hold Screen, while another fastens Brackets and Clamps together.